

ACCELERATOR 4in1 MULTI-GAME TABLE ASSEMBLY INSTRUCTIONS



NG1016M

 

 
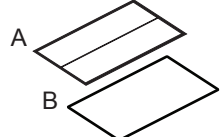


 



 

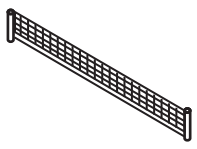










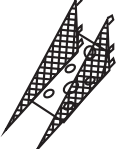
 
 
THANK YOU!

Thank you for purchasing this product.

We work around the clock and around the globe to ensure that our products maintain the highest possible quality. However, in the rare instance that your product is defective or missing parts, contact your retailer, or call 800-759-0977, to submit parts requests or warranty claims. Please read the warranty information at the back of these assembly instructions for further details.

IMPORTANT! PLEASE READ THESE ASSEMBLY INSTRUCTIONS IN ENTIRETY BEFORE ASSEMBLING YOUR PRODUCT.

PARTS IDENTIFIER (NOT TO SCALE)

<p>P1 NGP6000</p>  <p>TABLE BODY 1 pc</p>	<p>P2 NGP6001</p>  <p>LEG 4 pcs</p>	<p>P3 NGP6002</p>  <p>LEG PANEL 2 pcs</p>	<p>P4 NGP6003</p>  <p>TABLE TENNIS WHITE BOARD 1 pc</p>	<p>P5 NGP6004</p>  <p>LEG LEVELER 4 pcs</p>
<p>P6 NGP6005</p>  <p>BASKETBALL ARM 2 pcs</p>	<p>P7 NGP6006</p>  <p>BACKBOARD 1 pc</p>	<p>P8 NGP6007</p>  <p>BASKETBALL RIM 1 pc</p>	<p>P9 NGP6008</p>  <p>BASKETBALL 1 pc</p>	<p>P10 NGP6009</p>  <p>BALL RETURN NET 1 pc</p>
<p>P11 NGP6010</p>  <p>STRIKER 2 pcs</p>	<p>P12 NGP6011</p>  <p>PUCK 2 pcs</p>	<p>P13 NGP6012</p>  <p>TABLE TENNIS NET 1 pc</p>	<p>P14 NGP6013</p>  <p>TABLE TENNIS POSTS 2 pcs</p>	<p>P15 NGP6014</p>  <p>TABLE TENNIS BALL 2 pcs</p>
<p>P16 NGP6015</p>  <p>TABLE TENNIS PADDLE 2 pcs</p>	<p>P17 NGP6016</p>  <p>MARKER 2 pcs</p>	<p>P18 NGP6017</p>  <p>ERASER 1 pc</p>	<p>P19 NGP6018*</p>  <p>1/4"x3/4" BOLT 4 pcs</p>	<p>P20 NGP6018*</p>  <p>26mm BOLT 4 pcs</p>
<p>P21 NGP6018*</p>  <p>NUT 4 pcs</p>	<p>P22 NGP6018*</p>  <p>WASHER 20 pcs</p>	<p>P23 NGP6018*</p>  <p>1/4"x1-1/8" BOLT 16 pcs</p>	<p>P24 NGP6018*</p>  <p>1/2" SCREW 12 pc</p>	<p>P25 NGP5035</p>  <p>AIR PUMP 1 pc</p>
<p>P26 NGP6018*</p>  <p>ALLEN WRENCH 1 pc</p>	<p>*Items included in Hardware Pack, NGP6018</p>			

ASSEMBLY TIPS

1. Find a clean, level surface to begin the assembly of your game table. The table will be partially assembled upside down and then turned over onto its legs. This is a heavy game and turning it over will require at least two strong adults.
2. Remove all of the contents from box and verify that you have all of the parts shown on the Parts Identifier before you begin assembly. **Note: Some parts may be pre-installed or pre-assembled.**
3. Some figures or drawings may not look exactly like your product. Please read and understand the text before beginning each assembly step.
4. **When installing parts that have more than one screw or bolt, hand tighten all screws or bolts in place before final tightening with screwdriver or hex wrench.**
5. Electric screwdrivers may be helpful during assembly; however, please set a **low torque** and use extreme caution because screws may be stripped or overtightened, resulting in damaged parts, if the electric screwdriver's torque is set too high.


WARNINGS!

READ AND FOLLOW ALL ASSEMBLY, OPERATION AND SAFETY INSTRUCTIONS CAREFULLY.


**CHOKER HAZARD - THIS TABLE CONTAINS SMALL BALLS AND PARTS
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE.**

ASSEMBLY INSTRUCTIONS

1. Attach one LEG P2 to each corner of the TABLE BODY P1 using BOLTS P23 and WASHERS P22.
2. Attach LEG PANELS P3 to inside of LEGS P2 on each end of table using SCREWS P24 in pre-drilled holes.
3. Install one LEG LEVELER P5 on bottom of each Leg. Carefully turn table over onto legs.

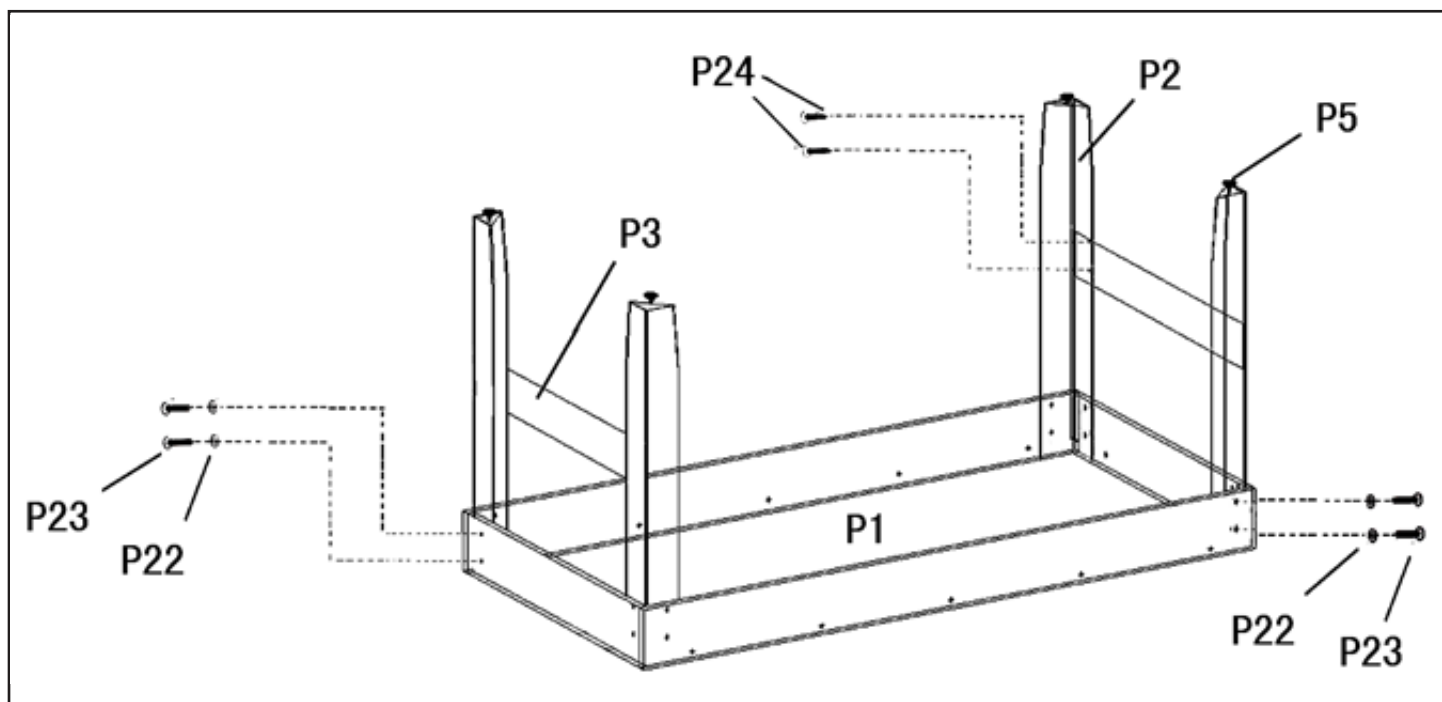


4. Attach BASKETBALL RIM P8 onto BACKBOARD P7 using SCREWS P24 in pre-drilled holes.

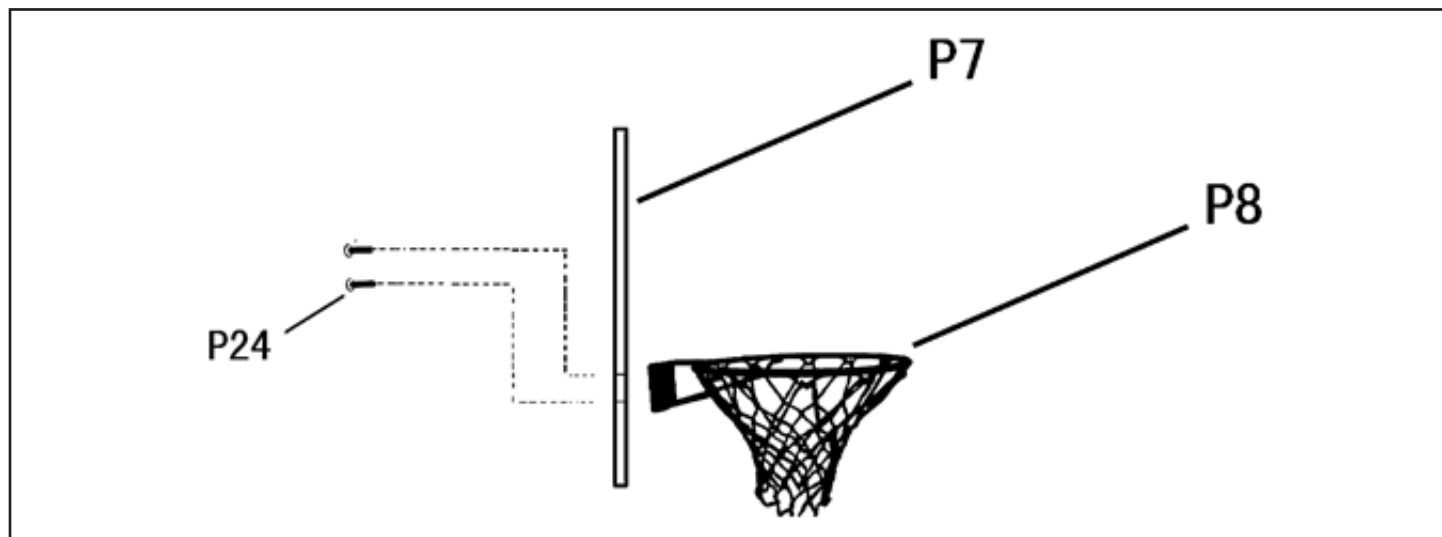

ASSEMBLY INSTRUCTIONS (CONT.)


5. Attach two BASKETBALL ARMS P6 onto end of TABLE BODY P1 using BOLTS P23 and WASHERS P22.
6. Attach BACKBOARD P7 onto BASKETBALL ARMS P6 using four BOLTS P20 and NUTS P21 as shown.

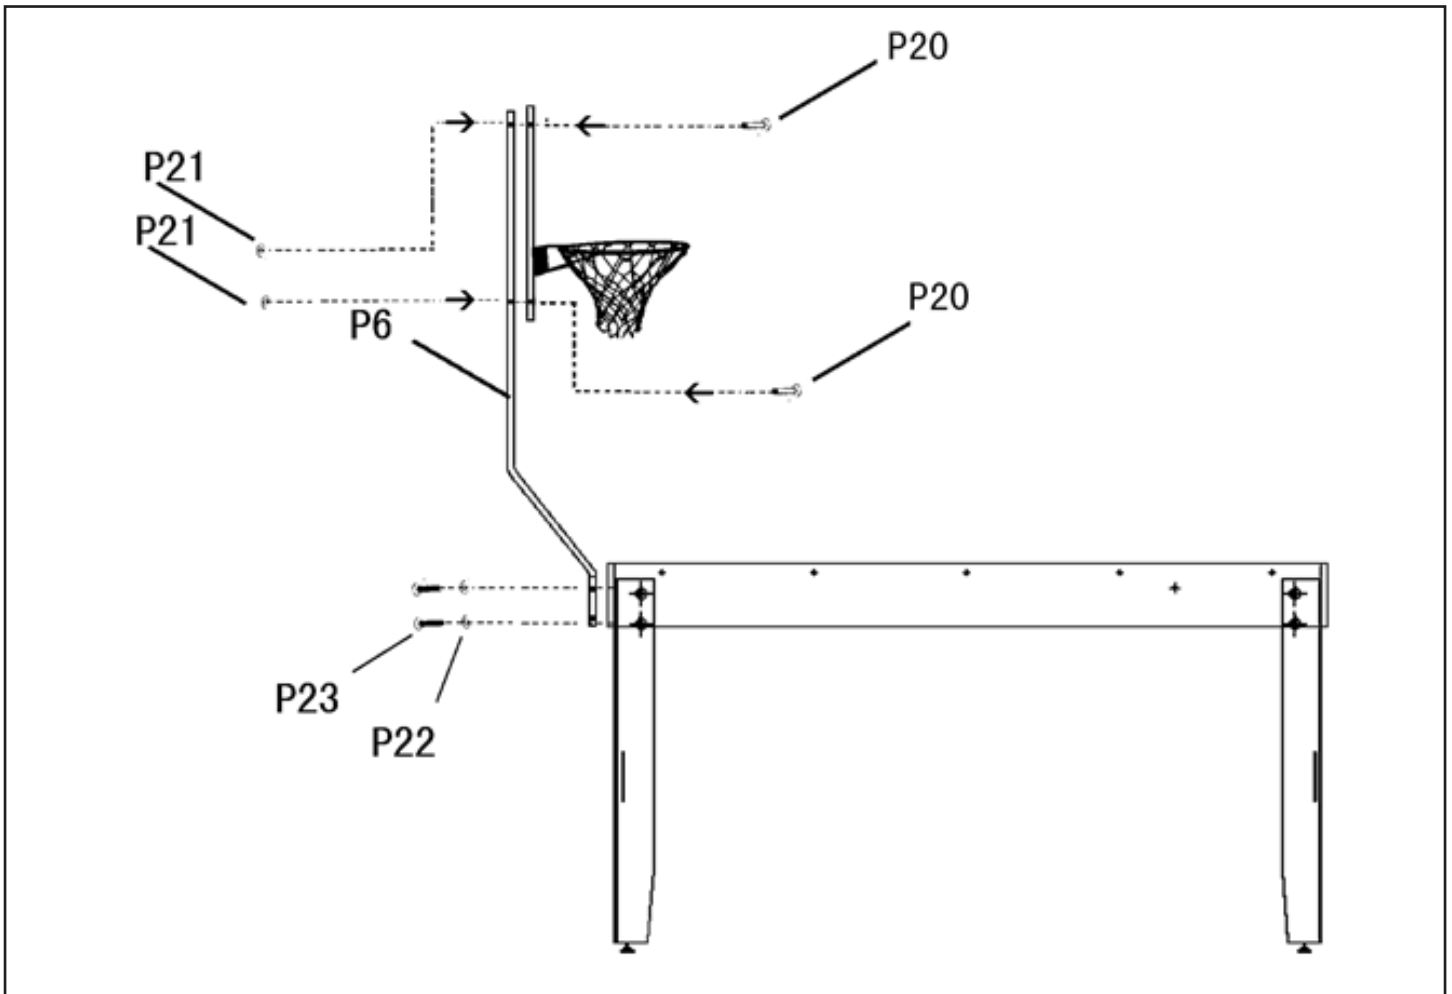

ASSEMBLY INSTRUCTIONS (CONT.)

7. Attach the BALL RETURN NET P10 to the two BASKETBALL ARMS P6 using the Velcro strips as shown.

6. Attach the black straps on the front sides of the BALL RETURN NET P10 to the sides of table using BOLTS P19 and WASHERS P22.

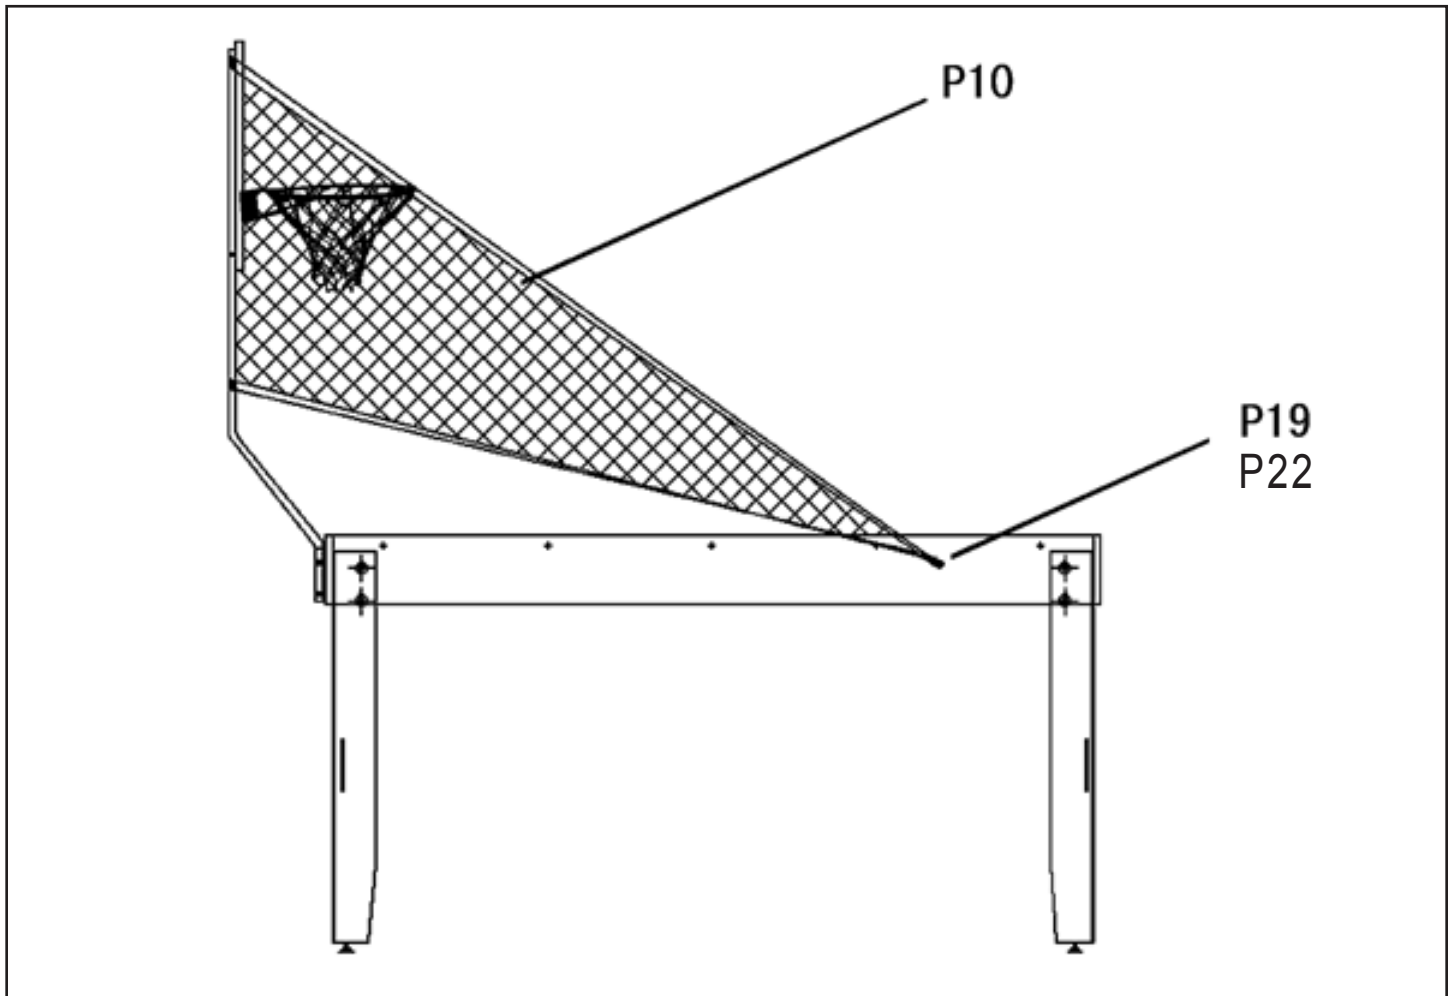

ASSEMBLY INSTRUCTIONS (CONT.)

Simply remove the basketball assembly to play AIR HOCKEY.



Place the dry erase board on top of the table to create a DESK or ART/CRAFT AREA.



Flip the dry erase board over, insert the net posts and net, and you're ready for TABLE TENNIS.



CONGRATULATIONS!

You have now assembled your Game Table.
Please note the Care and Use instructions below to ensure years of trouble free use of your game table.

CARE AND USE

1. This product is intended for **INDOOR** use only.
2. Do **NOT** sit, climb or lean on the table.
3. Do **NOT** drag the table when moving it as this will damage the legs.

180-DAY LIMITED WARRANTY

This product is warranted to the original purchaser to be free from defects in material or workmanship for a period of 180 days from the date of the original retail purchase.

This warranty does not cover defects or damage due to improper installation, alteration, accident or any other event beyond the control of the manufacturer. Defects or damage resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover scratching or damage that may result from normal usage.

This product is not intended for institutional or commercial use; the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, the manufacturer shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or components are not covered under this warranty.

The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

The manufacturer shall not be liable for loss of use of the product or other consequential or incidental costs, expenses or damages incurred by the consumer of any other use. The user assumes all risk of injury resulting from the use of this product.

This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal or state law. Neither the manufacturer nor any of its representatives assumes any other liability in connection with this product.

All warranty claims must be made through the retailer where the product was originally purchased. A purchase receipt or other proof of date of purchase will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any parts requests or warranty claims.

For further warranty information or inquiries, please call 800-759-0977