

TRIPLE THREAT 3-IN-1 FLIP TABLE ASSEMBLY INSTRUCTIONS



NG1022M

 

 
 

 

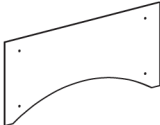 





 
 
 
 
 





 
THANK YOU!

Thank you for purchasing this product.

We work around the clock and around the globe to ensure that our products maintain the highest possible quality. However, in the rare instance that your product is defective or missing parts, contact your retailer, or call 800-759-0977, to submit parts requests or warranty claims. Please read the warranty information at the back of these assembly instructions for further details.


 

 


 


 
 

 

 




**IMPORTANT! PLEASE READ THESE ASSEMBLY INSTRUCTIONS
IN ENTIRETY BEFORE ASSEMBLING YOUR PRODUCT.**

PARTS IDENTIFIER (NOT TO SCALE)

| Part No./ Qty | Illustration/ Order Number | Part No./ Qty | Illustration/ Order Number | Part No./ Qty | Illustration/ Order Number |
|----------------------------|--|----------------------------|---|-----------------------------|--|
| 1 Qty. 1 |  Cabinet NGP5813 | 2 Qty. 1 |  Allen Wrench NGP5840 | 3 Qty. 2 |  End Panel NGP5814 |
| 4 Qty. 2 |  Catcher Box NGP5815 | 5 Qty. 2 |  Ball Return Board NGP5816 | 6 Qty. 2 |  Top End Panel NGP5817 |
| 7 Qty. 2 |  Leg Brace NGP5818 | 8 Qty. 2 |  Leg Panel NGP5819 | 9 Qty. 2 |  Left Leg NGP5820 |
| 10 Qty. 2 |  Right Leg NGP5821 | 11 Qty. 4 |  Leg Base NGP5822 | 12 Qty. 1 |  Table Tennis Surface NGP5823 |
| 13 Qty. 4 |  Leg Leveler NGP5824 | 14 Qty. 4 |  Lock Pin NGP5825 | 15 Qty. 2 |  Slide Scorer NGP5826 |
| 16 Qty. 8 |  1/4" x 1-3/4" Allen Key Bolt NGP5840 | 17 Qty. 8 |  5/16" x 5-1/2" Hex Bolt NGP5840 | 18 Qty. 2 |  1/2" Hex Bolt NGP5840 |
| 19 Qty. 2 |  1/2" Washer NGP5840 | 20 Qty. 2 |  1/2" Plastic Washer NGP5840 | 21 Qty. 8 |  5/16" Washer NGP5840 |
| 22 Qty. 8 |  1/4" Barrel Nut NGP5840 | 23 Qty. 8 |  5/16" Barrel Nut NGP5840 | 24 Qty. 10 |  T4 x 1/2" Screw NGP5840 |

**Please see Parts List at end of manual for part number when ordering parts.
For replacement parts please call 800-759-0977.**

  PARTS IDENTIFIER (NOT TO SCALE)

| | | |
|--|--|--|
| 25  Qty. 44 F4 x 2" Screw NGP5840 | 26  Qty. 4 F4 x 1" Screw NGP5840 | 27  Qty. 16 F3 x 1/2" Screw NGP5840 |
| 28  Qty. 2 Table Tennis Paddle NGP5827 | 29  Qty. 2 Table Tennis Ball NGP5828 | 30  Qty. 1 Table Tennis Net with Posts NGP5829 |
| 31  Qty. 2 Hockey Pusher NGP5830 | 32  Qty. 2 Hockey Felt NGP5831 | 33  Qty. 2 Hockey Puck NGP5832 |
| 34  Qty. 1 Triangle NGP5833 | 35  Qty. 1 Billiard Balls NGP5834 | 36  Qty. 2 Cue Stick NGP5835 |
| 37  Qty. 2 Chalk NGP5836 | 38  Qty. 1 Wrench NGP5840 | 39  Qty. 12 L Steel Bracket NGP5890 |
| 40  Qty. 2 Cue Holder NGP5837 | 41  Qty. 1 Storage Organizer NGP5838 | 42  Qty. 1 Brush NGP5839 |
| 43  Qty. 24 T4 x 5/8" Screw NGP5840 | | |

***Please see Parts List at end of manual for part number when ordering parts.
For replacement parts please call 800-759-0977.***

ASSEMBLY TIPS

1. Find a clean, level surface to begin the assembly of your game table. The table will be partially assembled upside down and then turned over onto its legs. This is a heavy game and turning it over will require at least two strong adults.
2. Remove all of the contents from box and verify that you have all of the parts shown on the Parts Identifier before you begin assembly. **Note: Some parts may be pre-installed or pre-assembled.**
3. Parts schematics are for reference only and may look slightly different than the actual part. Please read and understand the text before beginning each assembly step.
4. **When installing parts that have more than one screw or bolt, hand tighten all screws or bolts in place before final tightening with screwdriver or hex wrench.**
5. Electric screwdrivers may be helpful during assembly; however, please set a **low torque** and use extreme caution because screws may be stripped or overtightened, resulting in damaged parts, if the electric screwdriver's torque is set too high.

WARNINGS!

 
READ AND FOLLOW ALL ASSEMBLY, OPERATION AND SAFETY INSTRUCTIONS CAREFULLY.

**CHOKE HAZARD - THIS TABLE CONTAINS SMALL BALLS AND PARTS
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE.**

ASSEMBLY INSTRUCTIONS

STEP 1 - ASSEMBLE THE LEGS


1. Select one of the leg pieces (#9 or #10) and lay it flat on the floor. Do not bend the hinge in the leg backwards. Damage to the outer surface will occur.
2. Position three of the “L” shaped steel brackets (#39) on one side of the leg. Use three screws (#43) to attach the brackets to the leg. Close (fold) the leg and use three screws (#43) to secure the brackets. Tighten the screws.
3. Place a leg base (#11) at the bottom and insert three screws (#25) into the holes. The pressed in nut must be facing out away from the leg.
4. Tighten the screws.
5. Screw a leg leveler (#13) half way into the leg base.
6. Repeat for the remaining three legs.

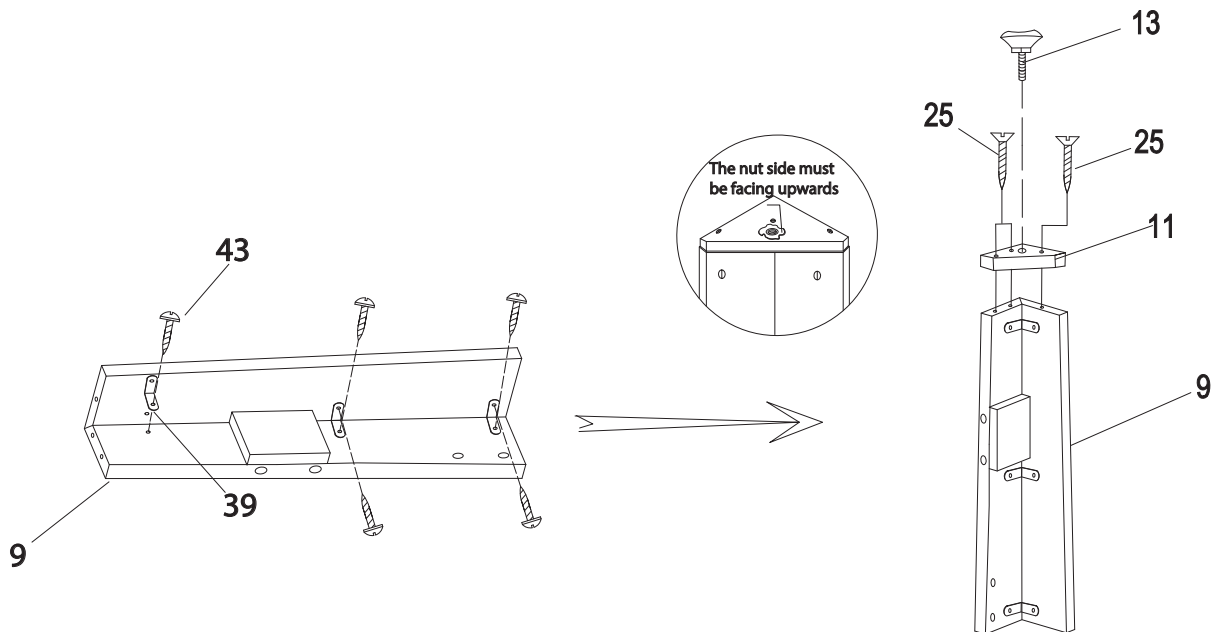

ASSEMBLY INSTRUCTIONS (CONT.)


STEP 2 - ATTACH THE TABLE LOCKS AND CATCH BOX

 1. Insert the table locks (#14) into the end panel (#3). Use four screws (#27) to secure each one.
2. Hold the catch box (#4) in position. Insert four screws (#25) from the back side of the end panel.
3. Tighten the screws.
4. Repeat for second end panel

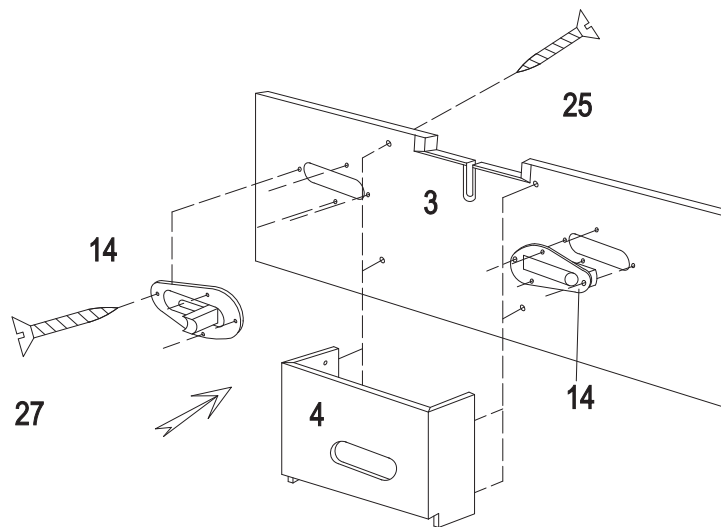

STEP 3 - ASSEMBLE BALL RETURN BOARD

 
1. Attach the ball return boards (#5) to the bottom of the end panels (#3). Use four screws (#25) per ball return board.
2. Tighten the screws.

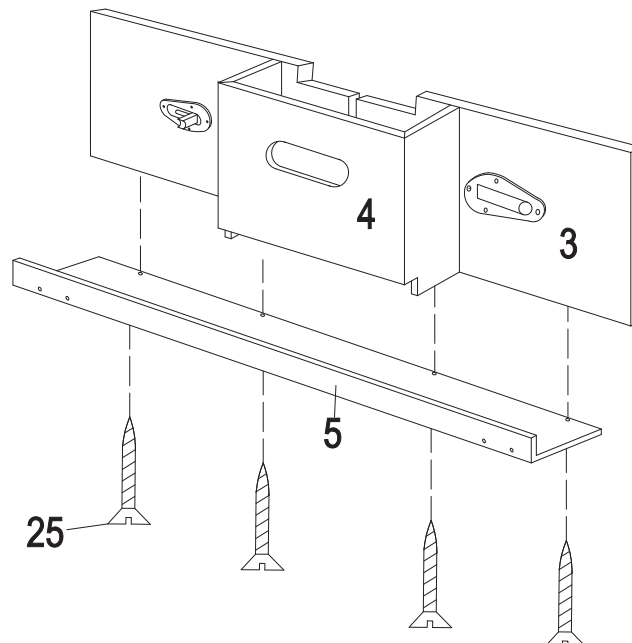

ASSEMBLY INSTRUCTIONS (CONT.)


STEP 4 - ASSEMBLE LEGS TO END PANELS

 1. Insert four barrel nuts (#22) into the left and right holes of an end panel (#3). Attach a left leg (#9) and a right leg (#10) to an end panel (#3) using two bolts (#16) per leg.
2. Attach a leg panel (#8) to the legs and secure it using four screws (#24) per leg panel.
3. Repeat steps 1 and 2 to assemble the other apron and legs.

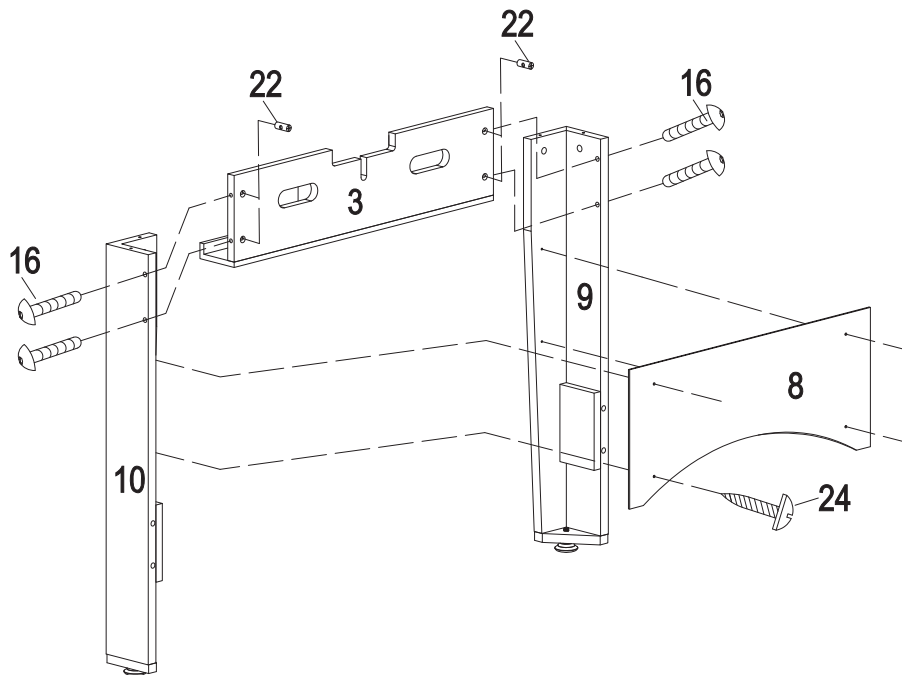

STEP 5 - ATTACH LEG BRACES

 1. Insert four barrel nuts (#23) into the holes of the leg braces (#7) as shown. Attach the leg braces (#7) between the assembled legs using four washers (#21) and four bolts (#17) per leg brace.

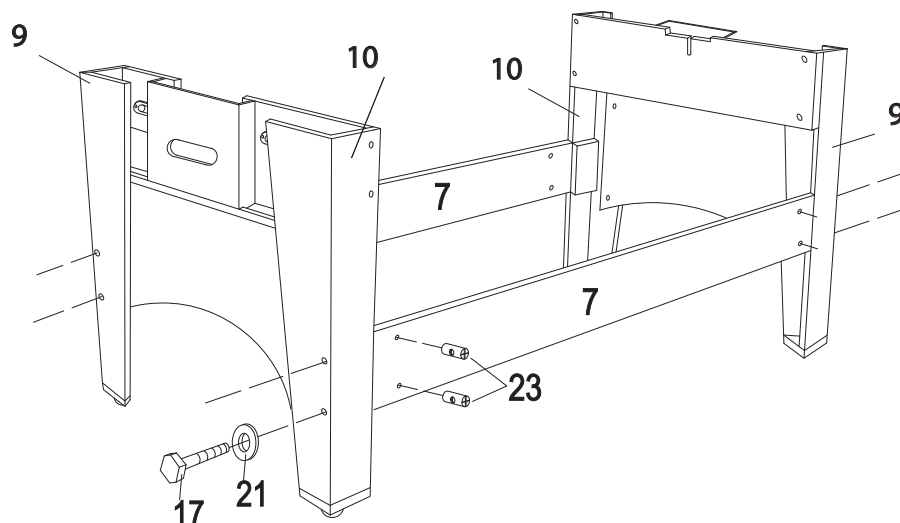

ASSEMBLY INSTRUCTIONS (CONT.)

 
STEP 6 - ASSEMBLE CABINET (TABLE TOP) TO LEGS

All bolts and screws from previous steps must be tight. Two adults are recommended for this step.

1. Engage all four table locks.
2. Locate the two large bolts (#18). Place a washer (#19) onto each bolt.
3. Place a second washer (#20) onto the bolts.
4. Finger start a bolt into each end of the cabinet (#1).
5. Place the cabinet into position. The bolts will drop into the slots at each end. The smaller washer must be outside the end panel and the plastic washer must be between the end panel and the cabinet.

NOTE: The electrical cord must be loose.


6. Open the table locks. Tighten the bolts until they are snug and the cabinet can rotate smoothly.

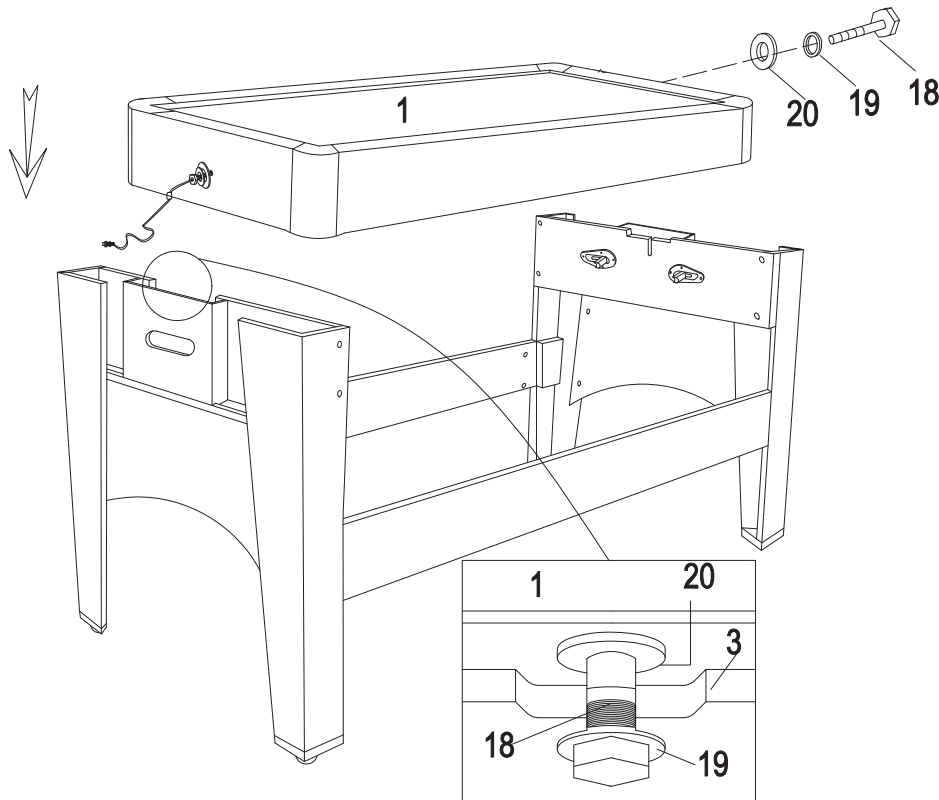

ASSEMBLY INSTRUCTIONS (CONT.)

STEP 7 - ASSEMBLE TOP SIDE PANELS AND SLIDE SCORERS

 1. Attach the two top end panels (#6) to the top of the end panels (#3) using eight screws (#25) for each top end panel.
2. Attach the slide scorers (#15) to the top end panels (#6) using two screws (#26).

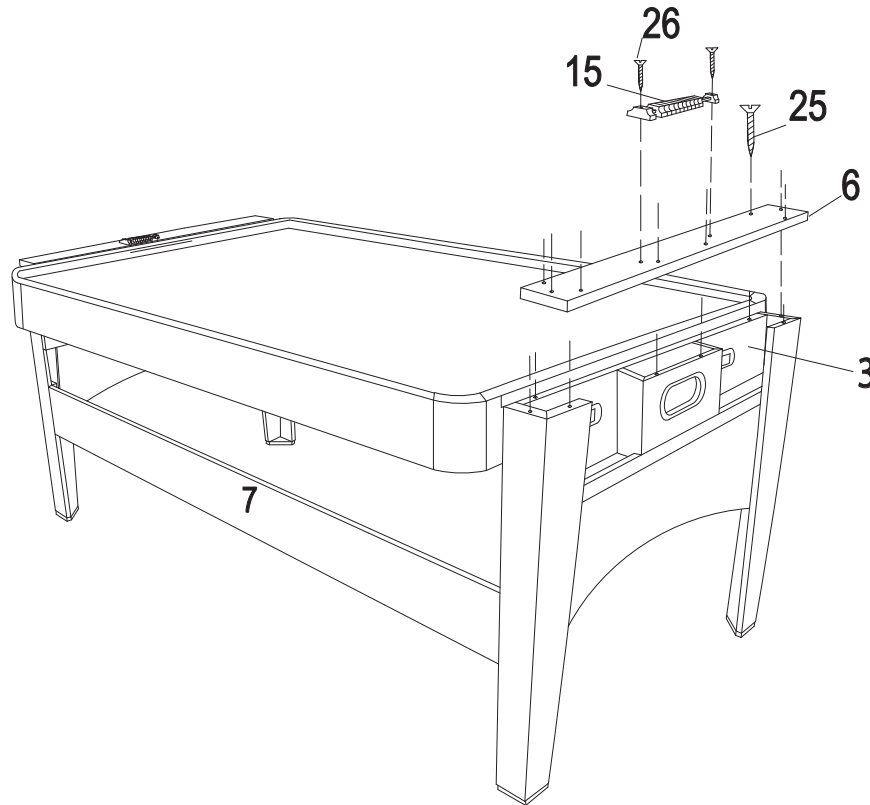

ASSEMBLY INSTRUCTIONS (CONT.)

 
STEP 8 - ADJUST THE LEVELERS

1. With the help of another person, lock the table in position. Turn each leg leveler until the table rests level.
2. Check with a carpenters level placed cross-wise and length wise on the table top.
3. Re-adjust leg levelers as necessary.

NOTE: Rolling a billiard ball slowly on the game table surface will help to determine level.


STEP 9 - ASSEMBLE PUSHERS

1. Peel paper from one of the hockey felt pieces (#32).
2. Attach the felt to the bottom of the pusher (#31).

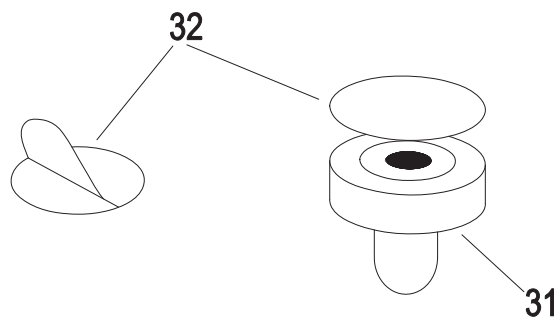

STEP 10 - ACCESSORIES

 
1. Clip the cue holders (#40) in place over a leg brace.
2. Secure the storage organizer (#41) to a leg brace using two screws (#24).

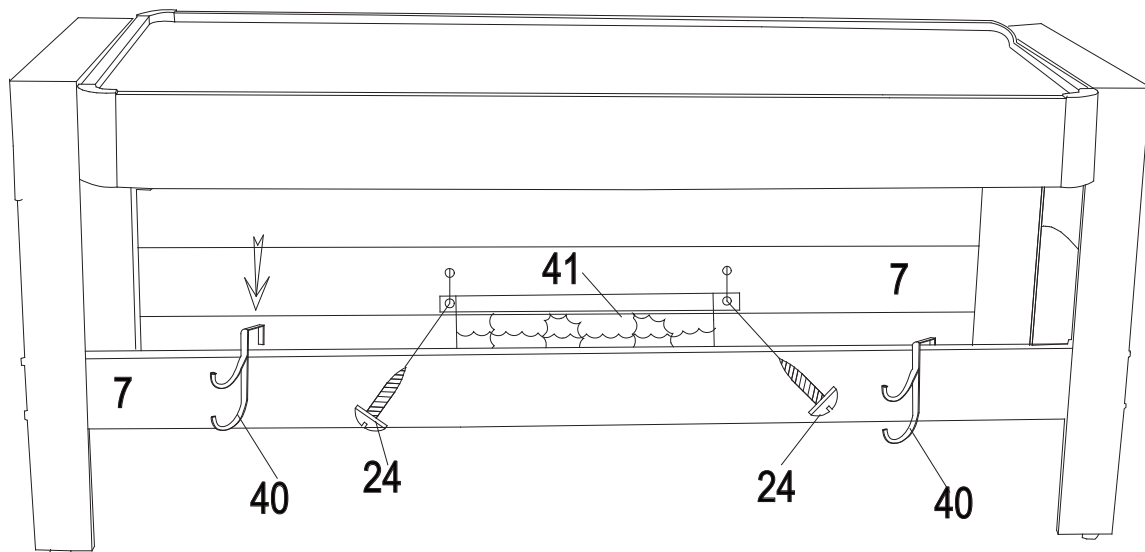

ASSEMBLY INSTRUCTIONS (CONT.)

STEP 11 - TABLE TENNIS NET WITH POSTS ASSEMBLY

 1. When you want to play table tennis, put the tennis surface (#12) carefully on top of the game table.
2. Insert the table tennis net with posts (#30) into the holes of the table tennis surface (#12).

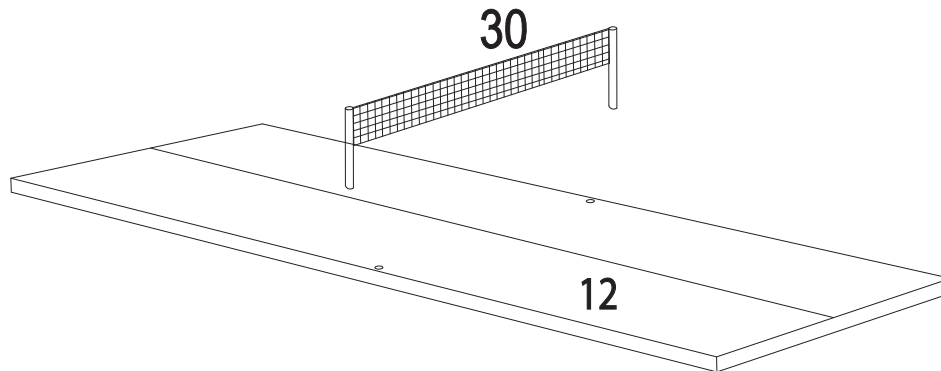

To rotate the table:

CAUTION: This should be performed by an adult. The rotating table may pinch body parts.

- Before you rotate the table, remove the pool balls.
- Pull out two table locks on one end.
- On the other end, pull out the two table locks.
- Slowly rotate the table.
- Push in the table locks.

If the fan does not go on:

- Unplug from electrical outlet.
- The fan is located between the two table tops.
- Inspect wiring for proper connection.

If the fan works but the table has dead spots:

- Use a small drill bit and clear the holes by hand. DO NOT use an electric drill. Manually push the drill bit into the holes to clear.
- Polish the air hockey table by spraying a furniture polish onto a rag and wipe onto the table. Do not spray directly onto the table top.

CONGRATULATIONS!

You have now assembled your Game Table.
Please note the Care and Use instructions below to ensure years of trouble free use of your game table.

Games

This game table includes the equipment and game pieces for Air Hockey, Pool and Table Tennis. The rules for these games are not discussed in this manual.

CARE AND USE

1. This product is intended for **INDOOR** use only.
2. Do **NOT** sit, climb or lean on the table.
3. Do **NOT** drag the table when moving it as this will damage the legs.
4. Keep your table covered. The pool table playing surface can be brushed to keep clean.
5. To clean the hard surfaces spray a cloth with a mild cleaner and wipe.
6. Pucks that fly off the table may have chipped edges. Inspect the puck and replace if needed.

180-DAY LIMITED WARRANTY

This product is warranted to the original purchaser to be free from defects in material or workmanship for a period of 180 days from the date of the original retail purchase.

This warranty does not cover defects or damage due to improper installation, alteration, accident or any other event beyond the control of the manufacturer. Defects or damage resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover scratching or damage that may result from normal usage.

This product is not intended for institutional or commercial use; the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, the manufacturer shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or components are not covered under this warranty.

The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

The manufacturer shall not be liable for loss of use of the product or other consequential or incidental costs, expenses or damages incurred by the consumer of any other use. The user assumes all risk of injury resulting from the use of this product.

 
This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal or state law. Neither the manufacturer nor any of its representatives assumes any other liability in connection with this product.

All warranty claims must be made through the retailer where the product was originally purchased. A purchase receipt or other proof of date of purchase will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any parts requests or warranty claims.


 
 

 



 



 
 
 

 
 


 
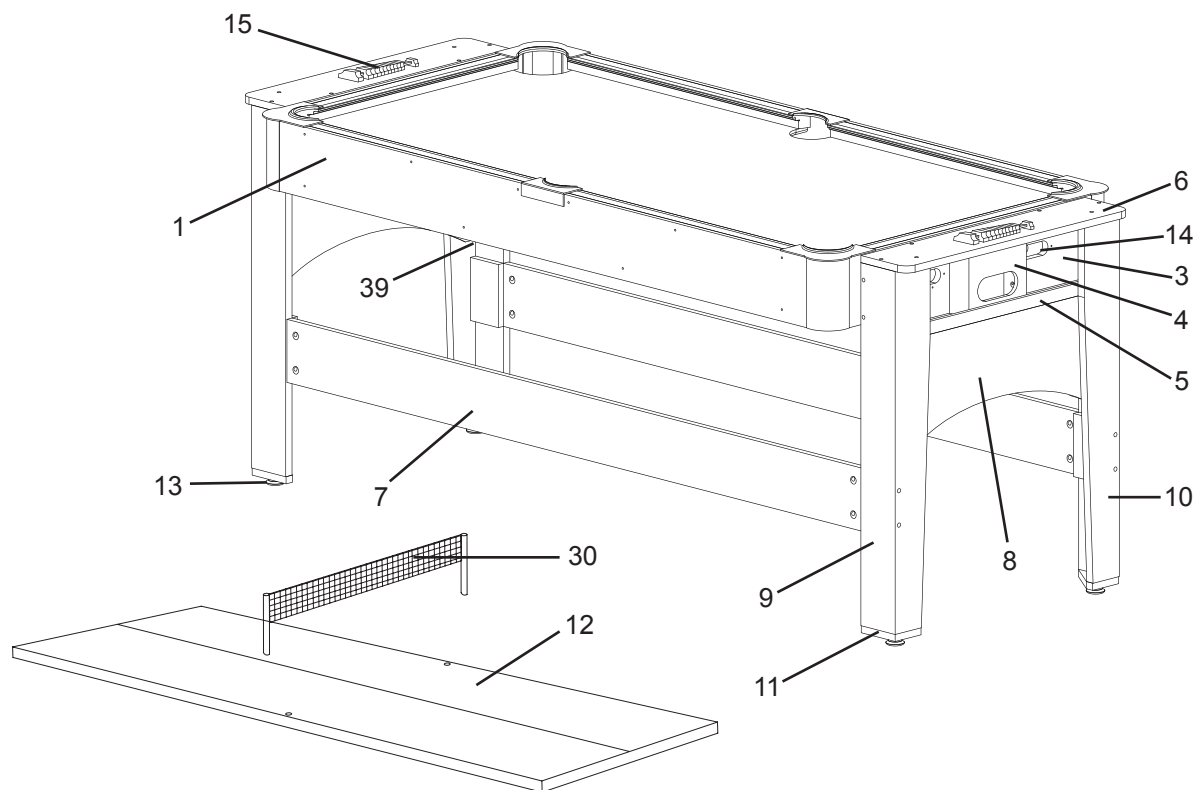 

 
 



For further warranty information or inquiries, please call 800-759-0977

TRIPLE THREAT 3-IN-1 FLIP TABLE - NG1022M


 
 
 





 
 
 

 
 
Parts List



PARTS

| | | | | | | |
|---|---|--|--|---|---|--|
| #1 NGP5813  CABINET | #3 NGP5814  END PANEL | #4 NGP5815  CATCHER BOX | #5 NGP5816  BALL RETURN BOARD | #6 NGP5817  TOP END PANEL | #7 NGP5818  LEG BRACE | #8 NGP5819  LEG PANEL |
| #9 NGP5820  LEFT LEG | #10 NGP5821  RIGHT LEG | #11 NGP5822  LEG BASE | #12 NGP5823  TABLE TENNIS SURFACE | #13 NGP5824  LEG LEVELER | #14 NGP5825  LOCK PIN | #15 NGP5826  SLIDE SCORER |
| #28 NGP5827  T-TENNIS PADDLE | #29 NGP5828  T-TENNIS BALL | #30 NGP5829  T-TENNIS NET & POSTS | #31 NGP5830  HOCKEY STRIKER | #32 NGP5831  STRIKER FELT | #33 NGP5832  HOCKEY PUCK | #34 NGP5833  TRIANGLE |
| #35 NGP5834  BILLIARD BALLS | #36 NGP5835  CUE STICK | #37 NGP5836  CHALK | #39 NGP5890  L BRACKET | #40 NGP5837  CUE HOLDER | #41 NGP5838  STORAGE ORGANIZER | #42 NGP5839  BRUSH |

HARDWARE PACK - NGP5840

| | | | | | | |
|--|--|---|--|---|---|---|
| #2  ALLEN WRENCH | #16  1/4" x 1-3/4" ALLEN KEY BOLT | #17  5/16" x 5-1/2" HEX BOLT | #18  1/2" HEX BOLT | #19  1/2" WASHER | #20  1/2" PLASTIC WASHER | #21  5/16" WASHER |
| #22  1/4" BARREL NUT | #23  5/16" BARREL NUT | #24  T4 x 1/2" SCREW | #25  F4 x 2" SCREW | #26  F4 x 1" SCREW | #27  F3 x 1/2" SCREW | #38  WRENCH |
| #43  T4 x 5/8" SCREW | | | | | | |