

8' HOT SHOT SKEEBALL TABLE ASSEMBLY INSTRUCTIONS



 
 
 
 
 


 
 
 
 
 

THANK YOU!


 

 
 
 

 


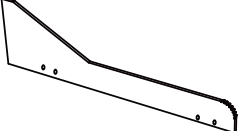 
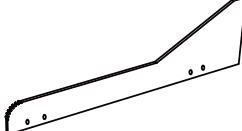 
Thank you for purchasing this product.

We work around the clock and around the globe to ensure that our products maintain the highest possible quality. However, in the rare instance that your product is defective or missing parts, contact your retailer, or call 800-759-0977, to submit parts requests or warranty claims. Please read the warranty information at the back of these assembly instructions for further details.

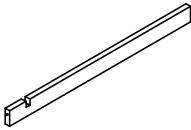 
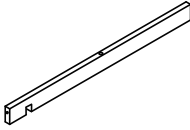 
 
 
 
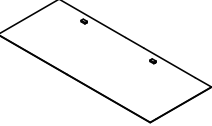 
 

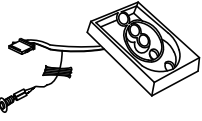 
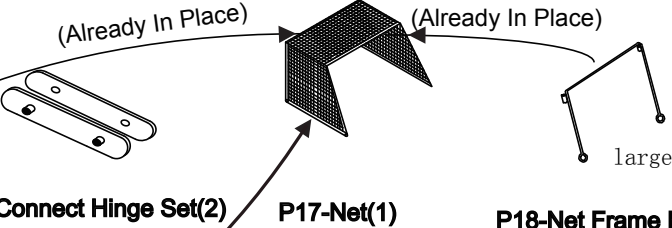 
 
 
 
 
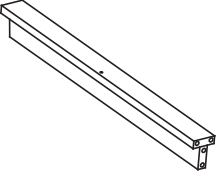 

 
**IMPORTANT! PLEASE READ THESE ASSEMBLY INSTRUCTIONS
IN ENTIRETY BEFORE ASSEMBLING YOUR PRODUCT.**

PARTS IDENTIFIER (NOT TO SCALE)

			
H1- 4x32mm Screw (36)	H2- 5/16" X1-1/8" Bolt (12)	H3- 5/16" Washer (12)	H4- 1/4x1-1/4" Bolt (4)
			
H5- 1/4" X1" Bolt (4)	H6- 1/4" Washer (4)	H7- 1/4" Washer (8)	H8- 3/4" Screw (3)
			
H9- 3/8" Screw (4)	H10 4x32mm Screw (6)	H11 4x35mm Screw (3)	H12 4x18mm Screw (4)
			
T1- Allen Wrench(1)			

			
P1L-Left Front Leg (1)	P1R-Right Front Leg (1)	P2L-Left Middle Leg (1)	P2R-Right Middle Leg (1)
			
P3L-Left Back Leg (1)	P3R-Right Back Leg (1)	P4-Spreader (3)	P5-Front End Apron
			
P6L-Left Front Side Apron (1)	P6R-Right Front Side Apron (1)	P7L-Left Back Side Apron (1)	P7R-Right Back Side Apron (1)

PARTS IDENTIFIER (NOT TO SCALE)

 <p>P8A-Crossbeam(1)</p>	 <p>P8B-Crossbeam(2)</p>	 <p>P9-Front Top panel(1)</p>	 <p>P10-Front bottom panel(1)</p>
 <p>P11-Back upper panel(1)</p>	 <p>P12-Back bottom panel(1)</p>	 <p>P13-Back board(1)</p>	 <p>P14-Electronic Scorer(1)</p>
 <p>P15-Target Board(1)</p>	 <p>(Already In Place) (Already In Place)</p> <p>P16-Connect Hinge Set(2) P17-Net(1) P18-Net Frame Front(1)</p> <p>large</p>		
 <p>P19-Net Frame Back(1) small</p>	 <p>P20-Net Spacer Bar(2)</p>	 <p>P21A-Support Panel (1)</p>	 <p>P21B-Support Panel (1)</p>
 <p>P22- "L" Support Panel (1)</p>	 <p>P23- Cover Panel (1)</p>	 <p>A1- Ball(6)</p>	



Please see Parts List at end of manual for part number when ordering parts. For replacement parts please call 800-759-0977.

ASSEMBLY TIPS

1. Find a clean, level surface to begin the assembly of your game table. The table will be partially assembled upside down and then turned over onto its legs. This is a heavy game and turning it over will require at least two strong adults.
2. Remove all of the contents from box and verify that you have all of the parts shown on the Parts Identifier before you begin assembly. **Note: Some parts may be pre-installed or pre-assembled.**
3. Some figures or drawings may not look exactly like your product. Please read and understand the text before beginning each assembly step.
4. **When installing parts that have more than one screw or bolt, hand tighten all screws or bolts in place before finishing tightening with screwdriver or hex wrench.**
5. Electric screwdrivers may be helpful during assembly; however, please set a low torque and use extreme caution because screws may be stripped or overtightened if the electric screwdriver's torque is set too high.

WARNINGS!

READ AND FOLLOW ALL ASSEMBLY, OPERATION AND SAFETY INSTRUCTIONS CAREFULLY.

CHOKER HAZARD - THIS TABLE CONTAINS SMALL BALLS AND PARTS - NOT
SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE.

ASSEMBLY INSTRUCTIONS

1. Find a clean, level place to begin the assembly of your game table. We recommend building the unit on the box top to protect the parts during assembly.

2. Locate part P10, front bottom panel

Locate 1pc P21B support panel

Locate 2pcs H8 screw

Note: P10 panel and P21B support Panel both have predrilled holes for this assembly, assemble per diagram.

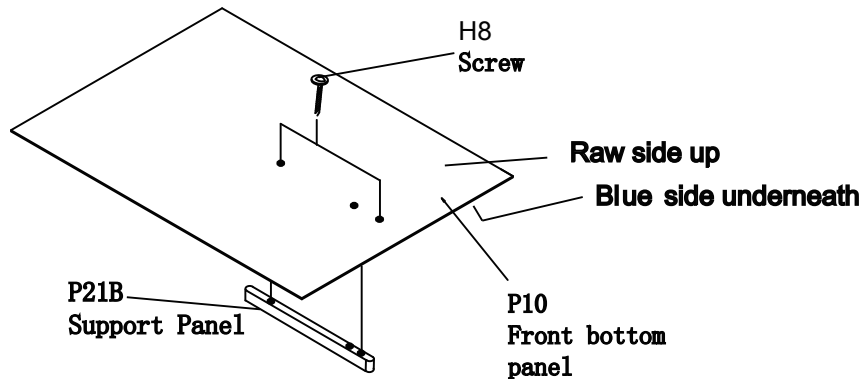 


Figure 1

3. Locate P6L left front side apron and P6R right front side panel apron
Place each apron upside down, approx. 2 feet apart, as shown in figure 2,
Please make sure gear hinge on P6L and P6R are both bottom right as shown.

Locate P9, front top panel .insert P9 panel into grooves of P6L and P6R side apron closest to floor. Slide all the way into place. Make sure to keep the slots on P9 on the same end as gear hinge per diagram. With help from another adult, hold this assembly firmly and assemble with (2) screws H1 into predrilled holes each side, as per diagram.

Locate part P5 front end apron. Locate 4pcs screws H1.

Place P5 front end apron into left side of this assembly with groove to the inside. Attach with 4pcs screws H1 into predrilled holes as shown in figure 2. Locate P10 front bottom panel(assemble in figure 1,step 2)

Slide P10 panel into top grooves of P6L and P6R per diagram, slide P10 all the way into this assembly .

NOTE:Assembly being built upside down

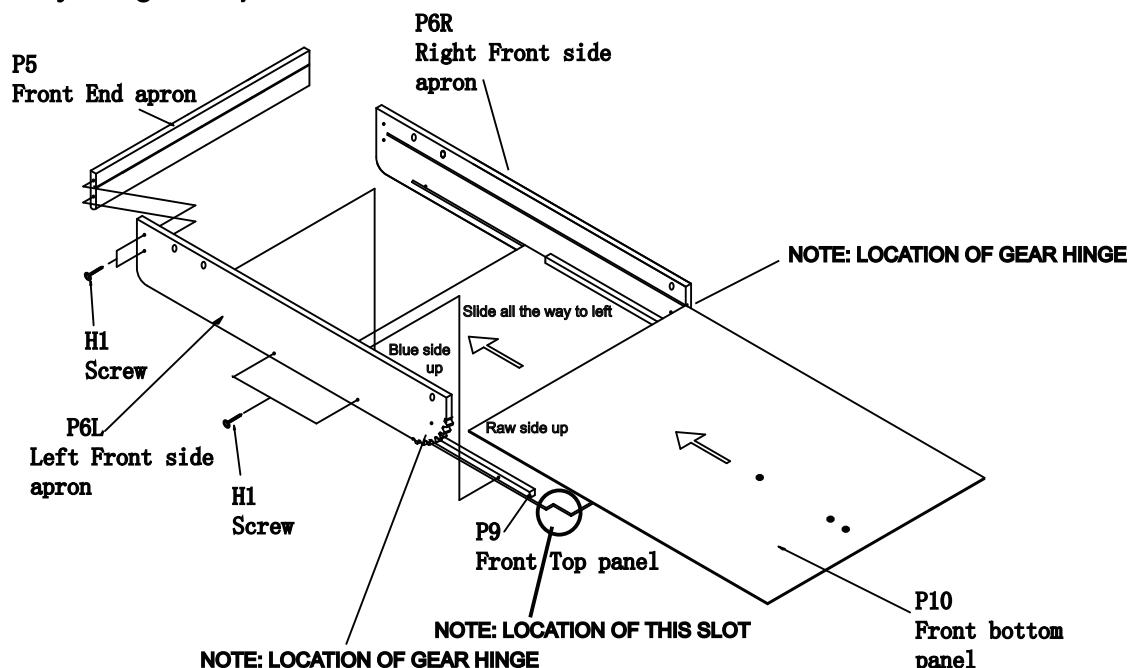 


Figure 2

ASSEMBLY INSTRUCTIONS

4. Locate (1)pc, P8B crossbeam with cutout

Locate (2)pcs H1 screws, Locate (1)pc H11 screw

Insert and attach P8B crossbeam using 2pcs H1 screws and 1pc H11 screw into predrilled holes as per diagram.

Locate parts P1L left front leg and P1R right front leg

Locate (1)pc P4 spreader,

Locate (4)pcs H2 bolts,

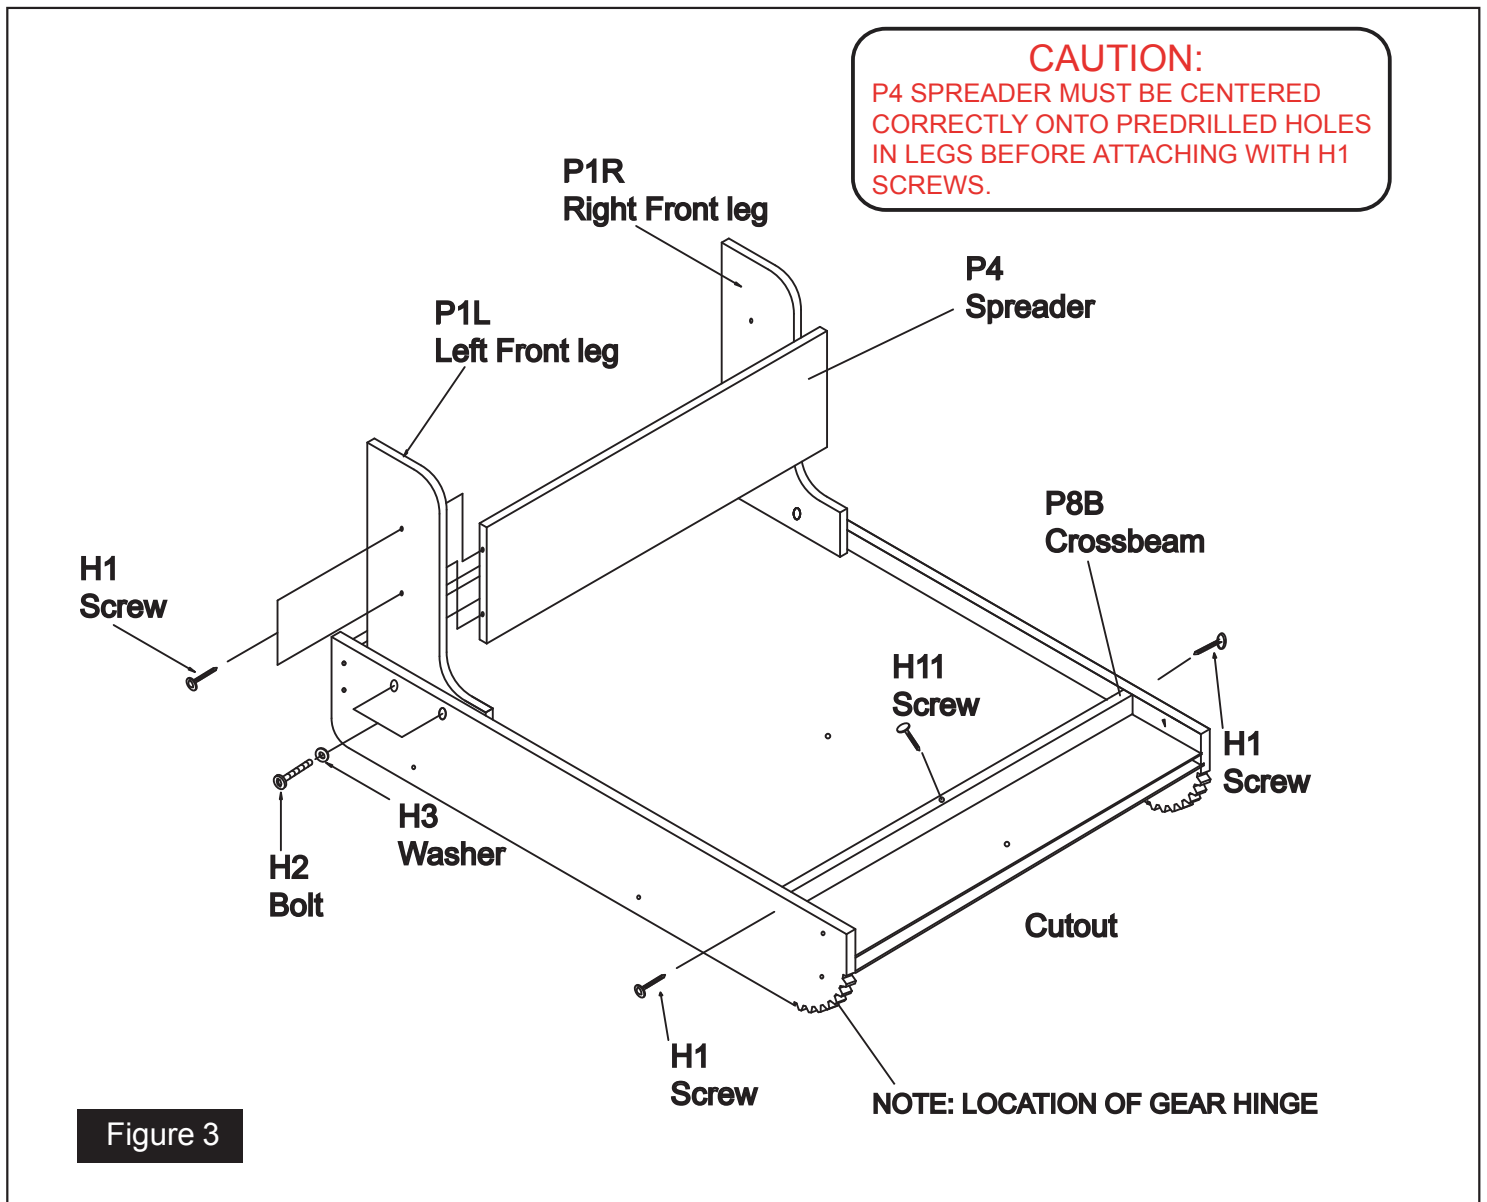 
Locate (4)pcs H3 washers,

Locate (4)pcs H1 screws,

Attach P1L and P1R legs per diagram. Tighten H2 bolts and H3 washers with T1 allen wrench.

Insert 1pc, P4 spreader in between legs P1L and P1R,

Attach P4 spreader with 4pcs H1 screws into predrilled holes as per diagram.



ASSEMBLY INSTRUCTIONS

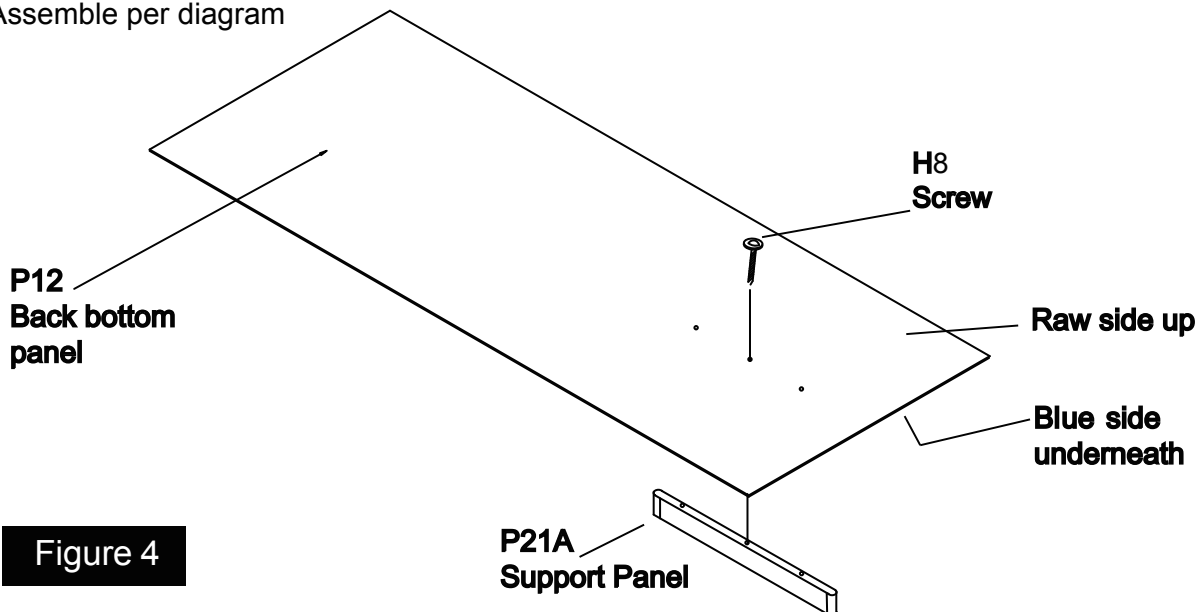 
5. Locate part P12 back bottom panel

Locate part P21A support panel

Locate 1 pc H8 screw

Note :P12 panel and P21A Support Panel both have predrilled holes for this assembly.

Assemble per diagram



6. Locate P7L and P7R back side aprons,

Locate 6pcs H1 screws.

Locate P11 back top panel.

With P7L and P7R aprons set exactly like figure 5,

Slide P11 back top panel into grooves closest to floor of P7L and P7R.

Note correct location of slots in end of P11 per diagram.

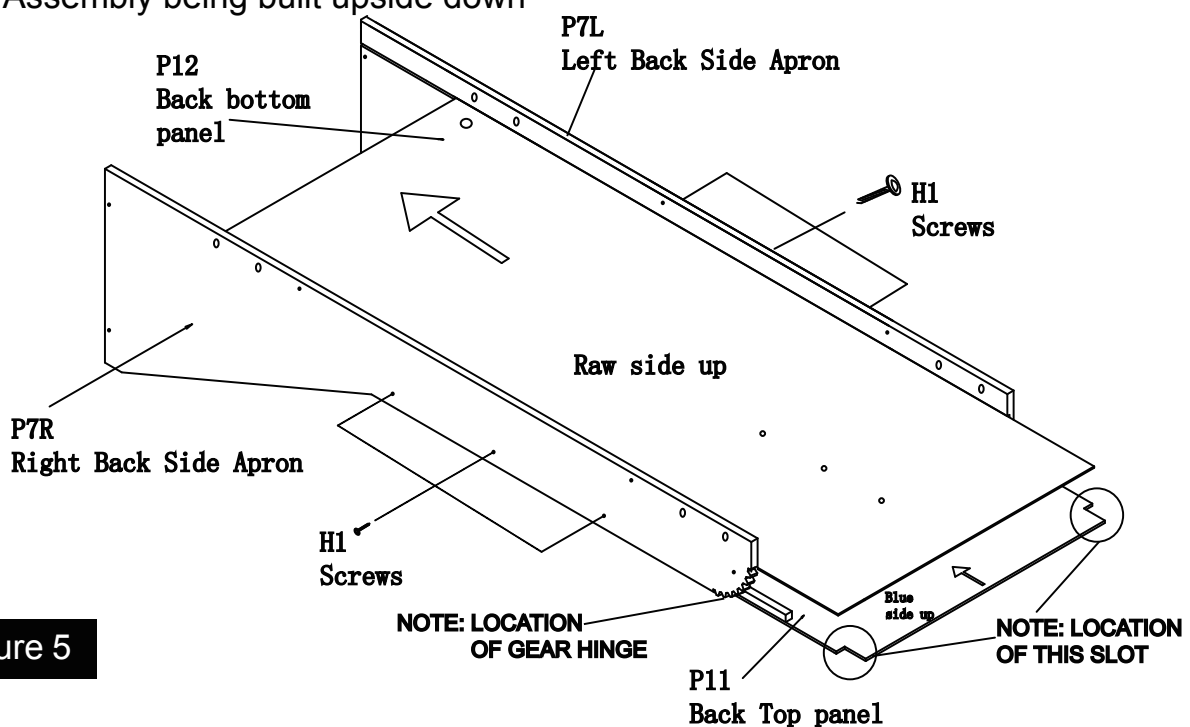 
With help from another adult, hold this assembly firmly and install 6pcs screws

H1 into predrilled holes each side, as per diagram.

Locate P12 back bottom panel(assemble in figure 4)

Slide P12 panel into top groove of P7L and P7R per diagram, slide P12 all the way into this assembly .

NOTE:Assembly being built upside down



ASSEMBLY INSTRUCTIONS

7. Locate 1pc P8A crossbeam, with cutout.

Locate 1pc P8B crossbeam. Locate 4pcs H1 screws Locate 1pc H11 screw.
Install P8A and P8B crossbeams as per diagram into predrilled holes, using screws H1 and (1)pc H11.
Note: Proper location of cutout in P8A and P8B crossbeams to serve as wiring guides in future steps. Also, note exact proper location of crossbeams P8A and P8B.

Locate parts P2L left middle leg, P2R right middle leg, P22 "L" Support Panel, and (8)pcs H10 screws.

Locate (1)pc P4 spreader, (4)pcs H2 bolts

Locate (4)pcs H3 washers, (4)pcs H1 screws

Assemble P2L and P2R middle legs exactly per diagram using H2 bolts and H3 washers.

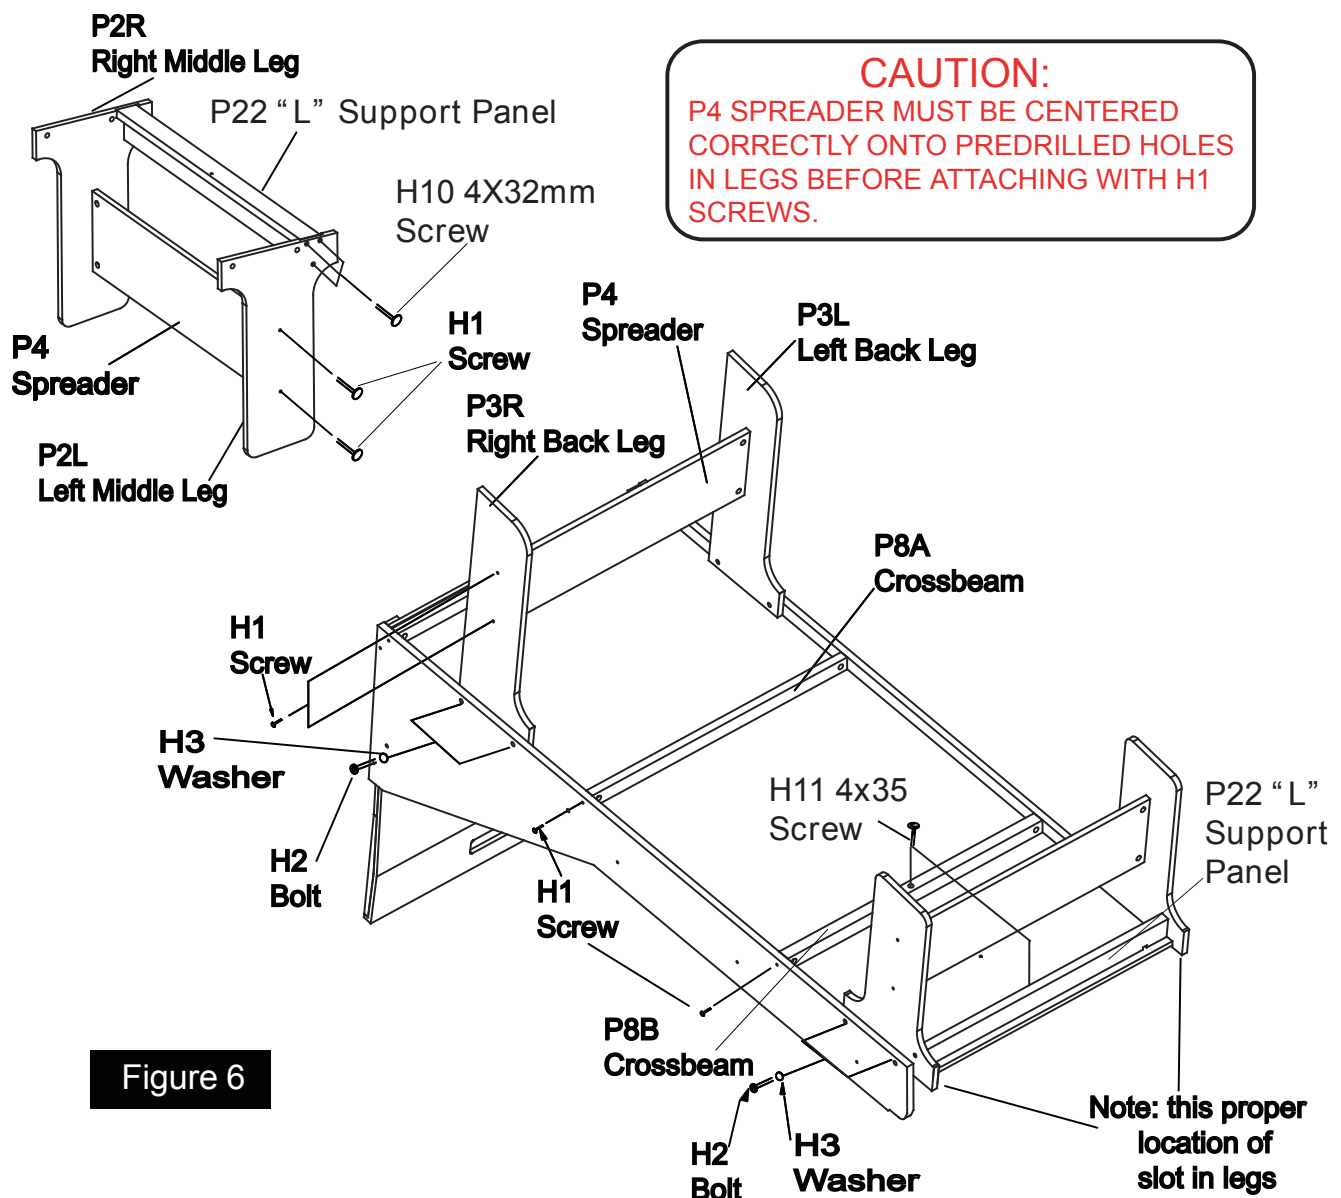 
Place Spreader P4 between Legs P2L and P2R, secure using Screws H1 in pre-drilled holes. Next, install P22 "L" Support Panel using 6 pcs. H10 screws.

Locate parts P3L left back leg and P3R right back leg

Locate (1)pc P4 spreader, (4)pcs H2 bolts

Locate (4)pcs H3 washers, (4)pcs H1 screws

Install P3R and P3L back legs as per figure 6. Install P4 spreader between legs P3R and P3L using predrilled holes. Attach spreader to legs using H1 screws per diagram. Use allen wrench T1 to tighten leg bolts H2.



ASSEMBLY INSTRUCTIONS

8. With the help of another adult, set both completed assemblies into upright position. Connect assemblies as per Figure 7.

Notes: Hinge gear assemblies must mesh together, per diagram,

No gap should be present between the two playfields

Locate (2) pcs, hinge set P16, (4) pcs, H5 Bolts, and (4) pcs, H7 washers

Attach P16 hinge sets as per diagram. Note Hinge gears must be meshed and no gap in playfields.

Note: Only one hinge plate per set is threaded and must be installed on inside of each side of playfield.

Install both hinge plate sets using H5 bolts and H7 washers per diagram,

saug but do not tighten H5 bolts as this is a pivot area.

Locate target board P15. Install P15 target board, red hole to the top.

The target board will rest on the edges of the side panels and also against the front of the ramp.

Locate the wiring harness on back of P15 target board.

Locate wiring harness on target board P15, On one bundle of white wire disconnect 2 leads from red push button switch. Locate hole in P7R Right side panel.

Remove washer and nuts from switch and install switch in hole in P7R Right side panel.

Reattach washer and nut onto switch. Do not reattach white wires to switch at this time.

Using ligature tie up the spare wires.

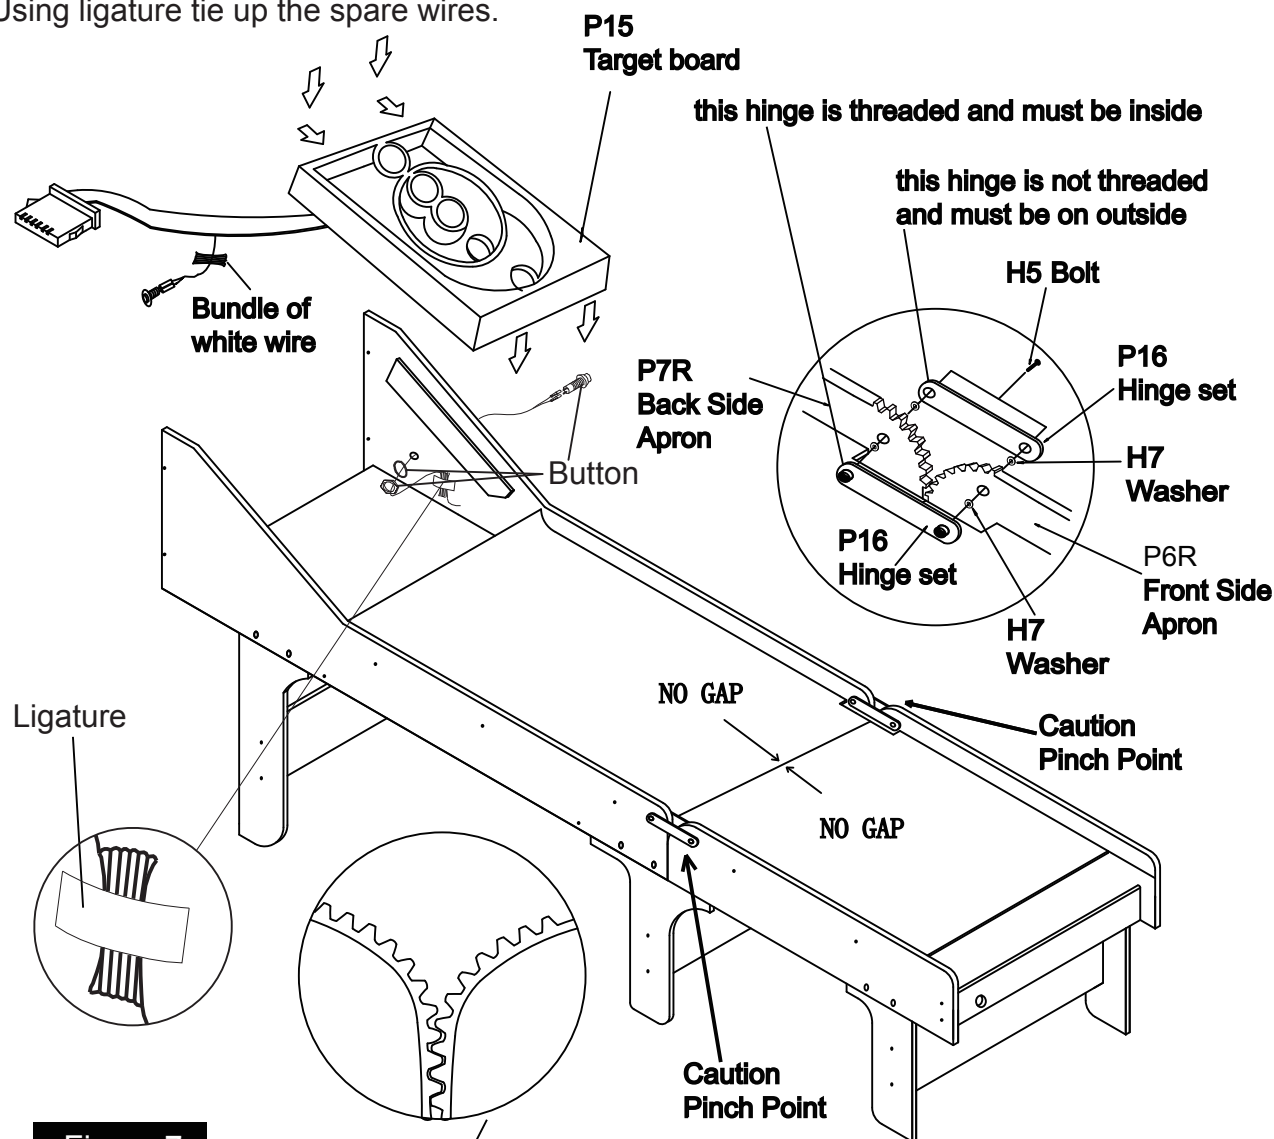 


Figure 7

Note: Hinge gear assemblies must mesh

ASSEMBLY INSTRUCTIONS

9. Locate backboard P13

Locate 4pcs H1 screws

Thread wiring harness and with white wire through round hole in P13 backboard as shown in Figure 8. Install P13 backboard into back of cabinet per Figure 8. using 4pcs H1 screws into predrilled holes

Disconnect the plug holding the two white wire, take the longer of the two white wires and while laying on your back, thread white wire through small slots in all P8 crossbeam under cabinet to front of game.

Plug both white wire leads into back of switch already installed in P5 front end apron.

Locate P14 electronic scorer

Locate 4pcs H9 screws

Attach P14 scorer to P13 backboard using 4pcs screws H9 as per Figure 8

Connect wiring harness from electronic scorer to P15 target board harness.

Reconnect the white wire

Attach P23 Cover panel to P13 backboard using screw H12 as per Figure 8.

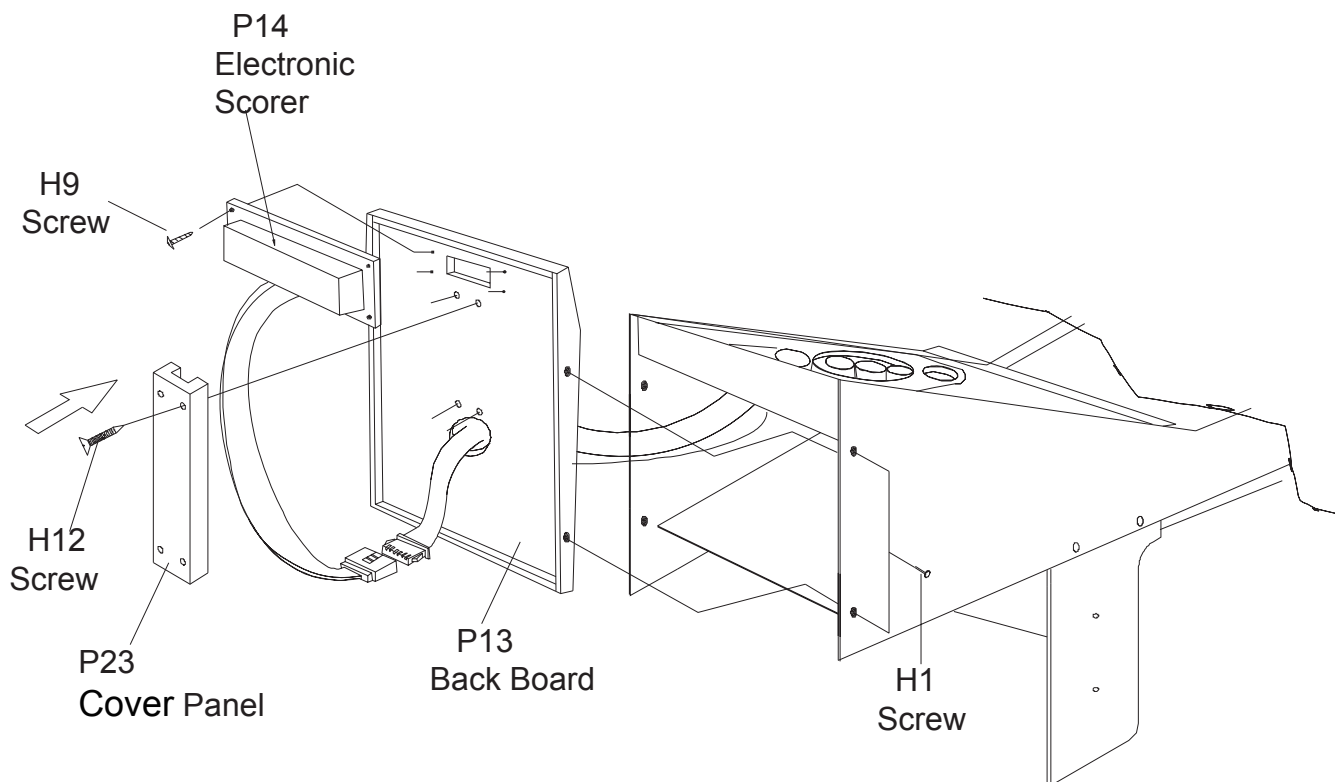 


Figure 8

ASSEMBLY INSTRUCTIONS

10.

Locate P17 net .Note,P17 net, P18 net frame front,P19 net frame back, and P20 net spacer bars are packaged together.

Locate 2pcs P20 net spacer bar

Per Figure 9,install 2pcs P20 net spacer bar up under the P17 net.

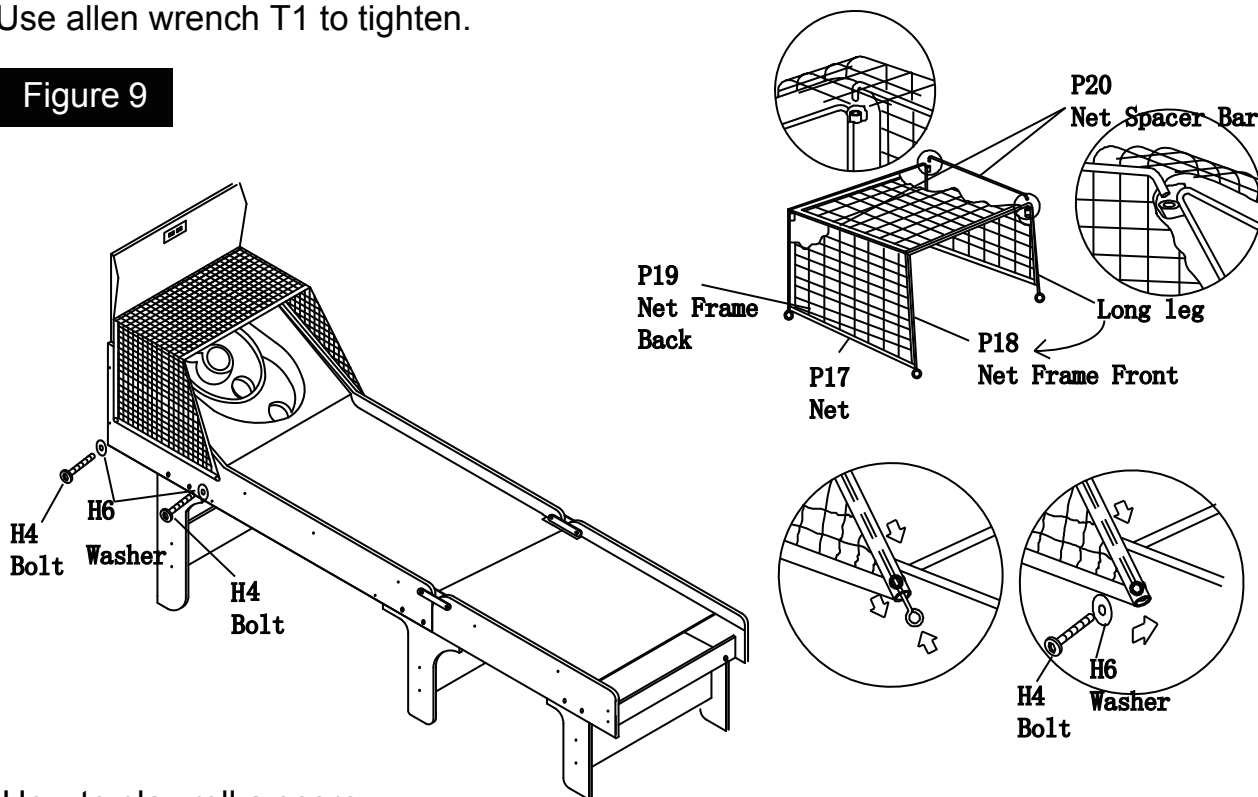 
Locate 4pcs ,H4 bolts

Locate 4pcs, H6 washers

Install P17 net frame as per Figure 9 using bolts H4 and washer H6,

Use allen wrench T1 to tighten.

Figure 9



How to play roll a score.

1. Using two adults set the unit in its final resting place in your game room.
2. Install four double “A” batteries (not included) into the backside of the P14 electronic scorer.
3. Turn the power switch on the electronics to the ON position.
4. When you have all “zeros” showing on the electronics press the reset button at the front of the unit. You are now ready to play.
5. Each player throws six ball per game trying to reach the highest score possible. If a ball is thrown and it does not score you may throw that ball again. The player with the highest score wins.
6. Press the reset button to play again.
7. Turn the power off and unplug the unit when not in use.

Caution: Do not “Throw” the ball at the target board as damage may occur. Correct and safe operation is to always “roll” the ball along the run way.

CONGRATULATIONS!

You have now assembled your Game Table. Please note the Care and Use instructions below to ensure years of trouble free use of your game table.

CARE AND USE

1. This product is intended for INDOOR use only.
2. Do NOT sit, climb or lean on the table.
3. Do NOT drag the table when moving it as this will damage the legs.

180-DAY LIMITED WARRANTY

This product is warranted to the original purchaser to be free from defects in material or workmanship for a period of 180 days from the date of the original retail purchase.

This warranty does not cover defects or damage due to improper installation, alteration, accident or any other event beyond the control of the manufacturer. Defects or damage resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover scratching or damage that may result from normal usage.

This product is not intended for institutional or commercial use; the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, the manufacturer shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or components are not covered under this warranty.

The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

The manufacturer shall not be liable for loss of use of the product or other consequential or incidental costs, expenses or damages incurred by the consumer of any other use. The user assumes all risk of injury resulting from the use of this product.

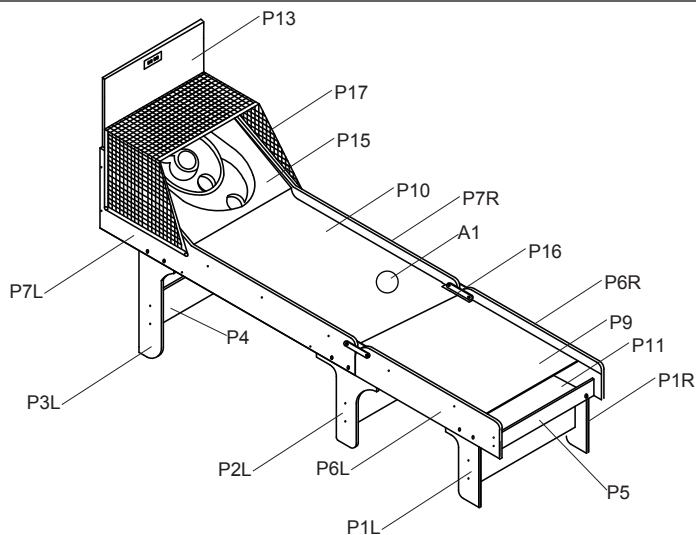 
This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal or state law. Neither the manufacturer nor any of its representatives assumes any other liability in connection with this product.

All warranty claims must be made through the retailer where the product was originally purchased. A purchase receipt or other proof of date of purchase will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any parts requests or warranty claims.




 

 






 
 



 


 
 
 

 



 

 
For further warranty information or inquiries, please call 800-759-0977

HOT SHOT SKEEBALL TABLE - NG2015

 






 


 



Parts List



PARTS

P1L NGP5856  LEFT FRONT LEG	P1R NGP5857  RIGHT FRONT LEG	P2L NGP5858  LEFT MIDDLE LEG	P2R NGP5859  RIGHT MIDDLE LEG	P3L NGP5860  LEFT BACK LEG	P3R NGP5861  RIGHT BACK LEG	P4 NGP5862  SPREADER
P5 NGP5863  FRONT END APRON	P6L NGP5864  LEFT FRONT SIDE APRON	P6R NGP5865  RIGHT FRONT SIDE APRON	P7L NGP5866  LEFT BACK SIDE APRON	P7R NGP5867  RIGHT BACK SIDE APRON	P8A NGP5868  CROSSBEAM	P8B NGP5869  CROSSBEAM
P9 NGP5870  FRONT TOP PANEL	P10 NGP5871  FRONT BOTTOM PANEL	P11 NGP5872  BACK UPPER PANEL	P12 NG5873  BACK BOTTOM PANEL	P13 NG5874  BACKBOARD	P14 NG5875  ELECTRONIC SCORER	P15 NG5876  TARGET BOARD
P16 NGP5877  CONNECT HINGE SET	P17 NGP5878  NET	P18 NGP5879  NET FRAME FRONT	P19 NG5880  NET FRAME BACK	P20 NG5881  NET SPACER BAR	P21A NG5882  SUPPORT PANEL	P21B NG5883  SUPPORT PANEL
P22 NGP5884  "L" SUPPORT PANEL	P23 NGP5885  COVER PANEL	A1 NGP5886  BALL				

HARDWARE PACK - NGP5887

H1  1-1/4" SCREW	H2  5/16" BOLT	H3  5/16" WASHER	H4  1/4"X1-1/4" BOLT	H5  1/4"X1" BOLT	H6  1/4" FLAT WASHER	H7  1/4" FLAT WASHER
H8  3/4" SCREW	H9  3/4" SCREW	H10  1-1/4" FLAT SCREW	H11  1-1/2" SCREW	H12  3/4" FLAT SCREW	T1  ALLEN WRENCH	ADDITIONAL EQUIPMENT REQUIRED:  PHILLIPS HEAD SCREWDRIVER