
ASSEMBLE Top Seat, Vertical and Cover 10 FRAME

For 54" depth pools only. b) PRE-ASSEMBLING Vertical Extension PRE-ASSEMBLING VERTICALS Put 10in Resin Vertical Extension

use three #12 Sheet Metal Screw.

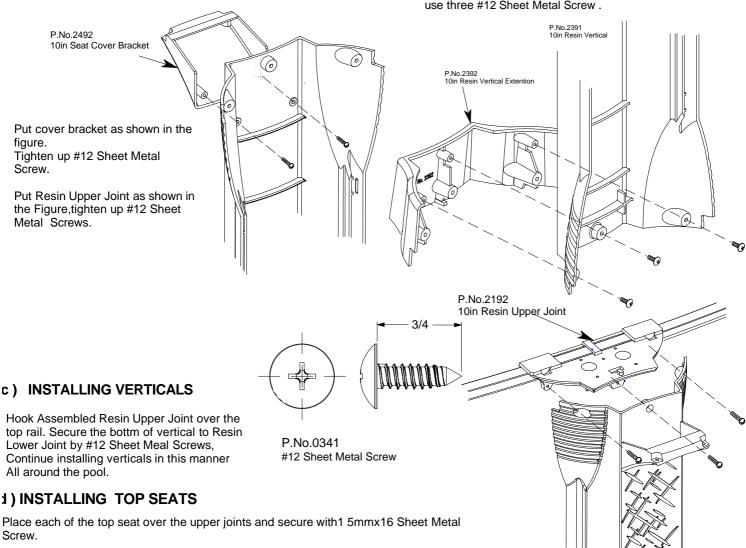

Install all of top seat in this way around entire pool.

Top seat are installed between verticals.

Each end of top seat rest on upper joint and attached to it.

It may be necessary to move the complete verticals slightly to left or right to accommodate the top seat. Do this carefully as not disturb the earth mound, Check all screws to be sure they are tight.

the top seat as shown figure. End A use shorter screws. End B use longer END; B END; A ³.No.0341 12 Sheet Metal Screw P.No.0345 5mmx40 Sheet Metal Screw

For 12' round and all 10' and 12' width ovals

use different screws for right and left end of

