
**ASSEMBLE Top Seat, Vertical and Cover** 

7 FRAME

## a) PRE-ASSEMBLING VERTICALS


Put Resin Upper Joint as shown in the Figure, tighten up #12 Sheet Metal Screws.




P.No.0341 #12 Sheet Metal Screw

## b) INSTALLING VERTICALS

Hook Assembled Resin Upper Joint over the top rail. Secure the bottm of vertical to Resin Lower Joint by #12 Sheet Meal Screws, Continue installing verticals in this manner All around the pool.

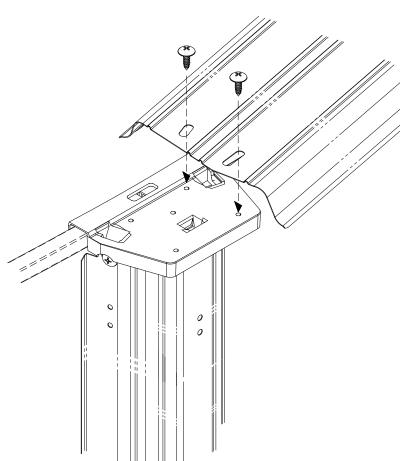

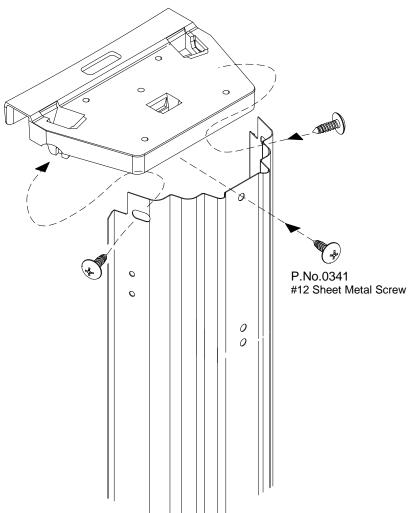

## c) INSTALLING TOP SEATS


Place each of the top seat over the upper joints and secure with #12 Sheet Metal Screws.

Install all of top seat in this way around entire pool. Top seat are installed between verticals.

Each end of top seat rest on upper joint and attached to it.

It may be necessary to move the complete verticals slightly to left or right to accommodate the top seat. Do this carefully as not disturb the earth mound, Check all screws to be sure they are tight.



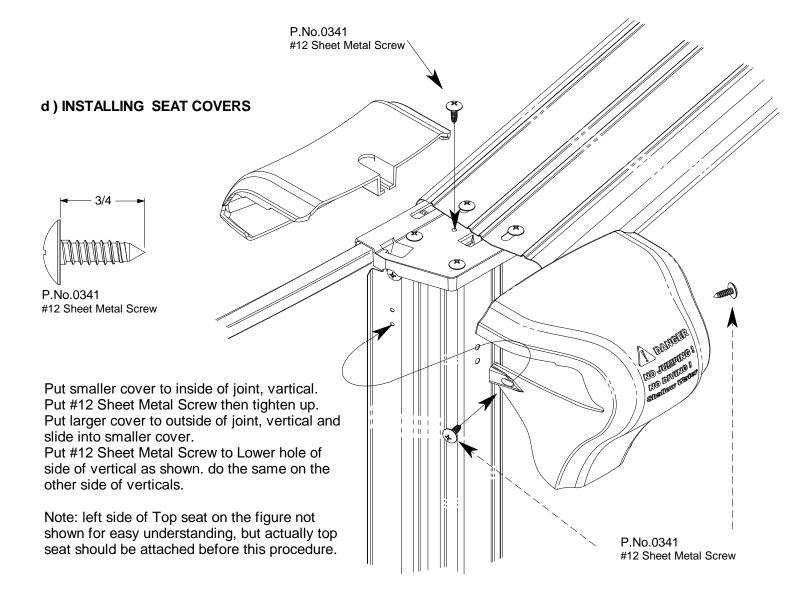

# FOR OVAL POOL ONLY

# e ) INSTALLING OVAL SIDE TOP SEAT AND SIDE SEAT COVERS

Use #12 Sheet Metal Screw to Install oval side top seats on top of Resin side upper joint P.No.3177. Cut two prong of inside of side seat cover as shown in the figure, then attach side seat cover by placing it from inside of pool in right position as shown in the figure.

Put #12 Sheet Metal Screw to side seat cover and tighten it up. Put seat cover cap on top of side seat cover.

